



Elegant interior wall

Installation guide


Indoor Wall Panel Installation

With WPC joist

Install the joist
structure



L-external corner

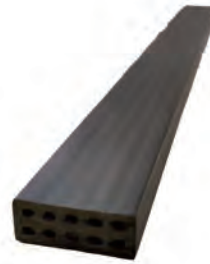

wpc/wood joist



WPC wall panel





expansion screws
gun nail

Step 1



Install the joist

Fix the joist with expansion screws,
set an expansion screw on the joist every 500mm.
Centering distance for the joist is 600 mm.

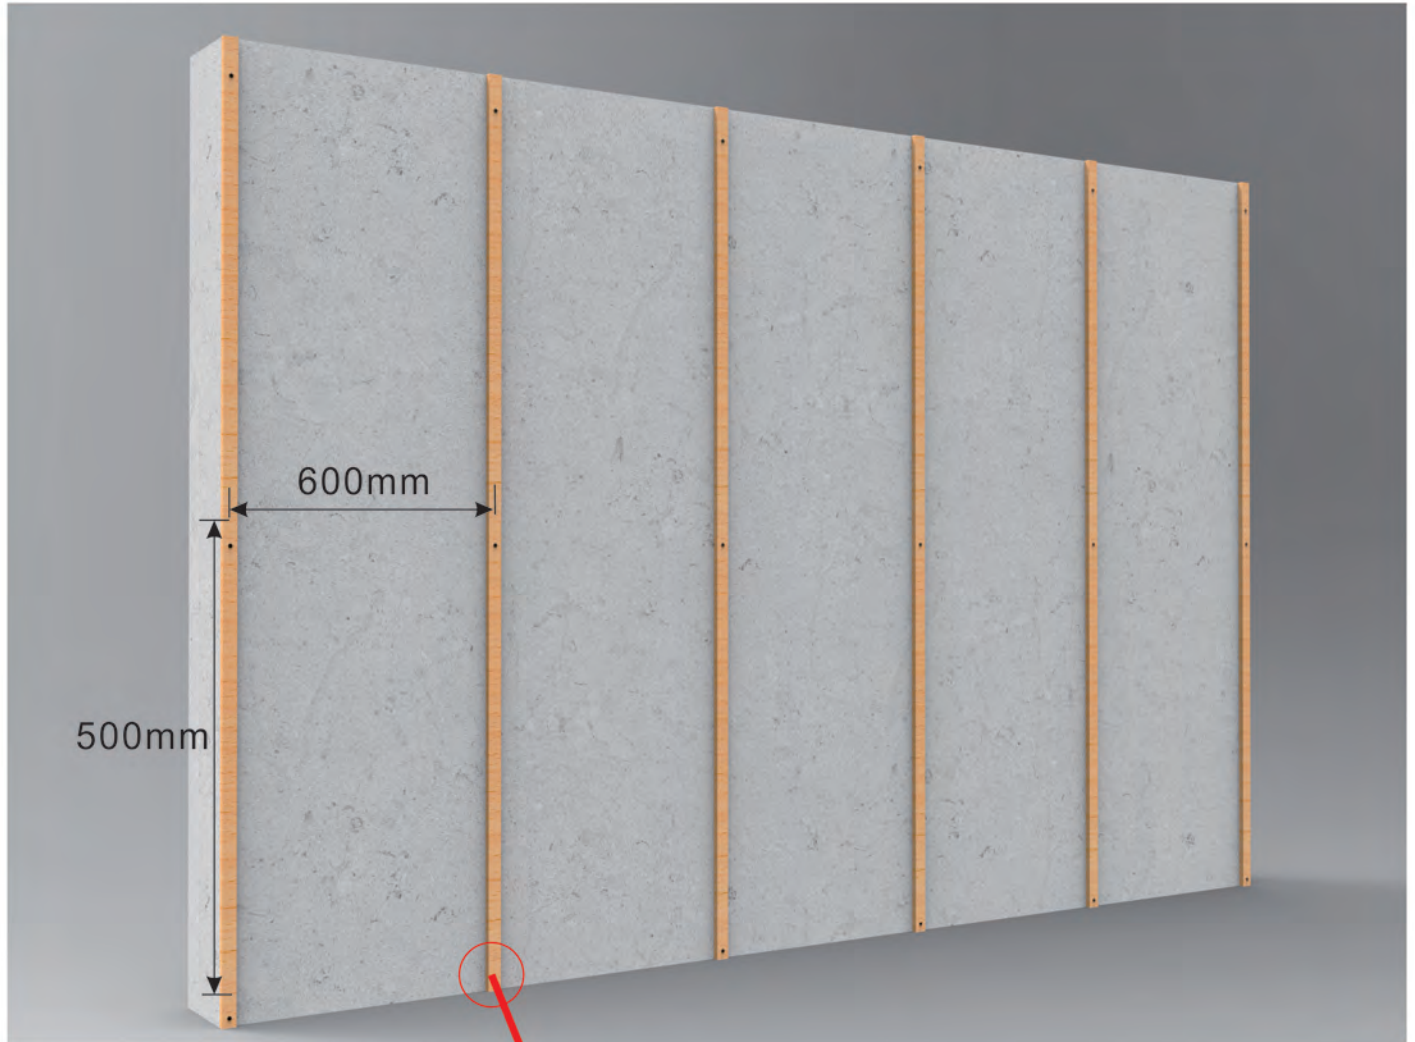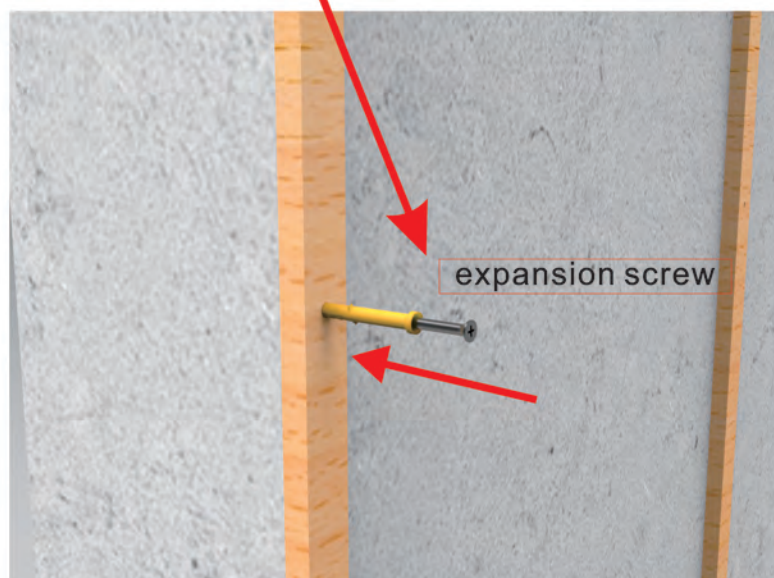

Step 2



Make sure the wall panel not longer than 3000 mm.
Fix the the upper and lower ends of the first panel
on the joist by gun nail.
Nail the panel on each joist.

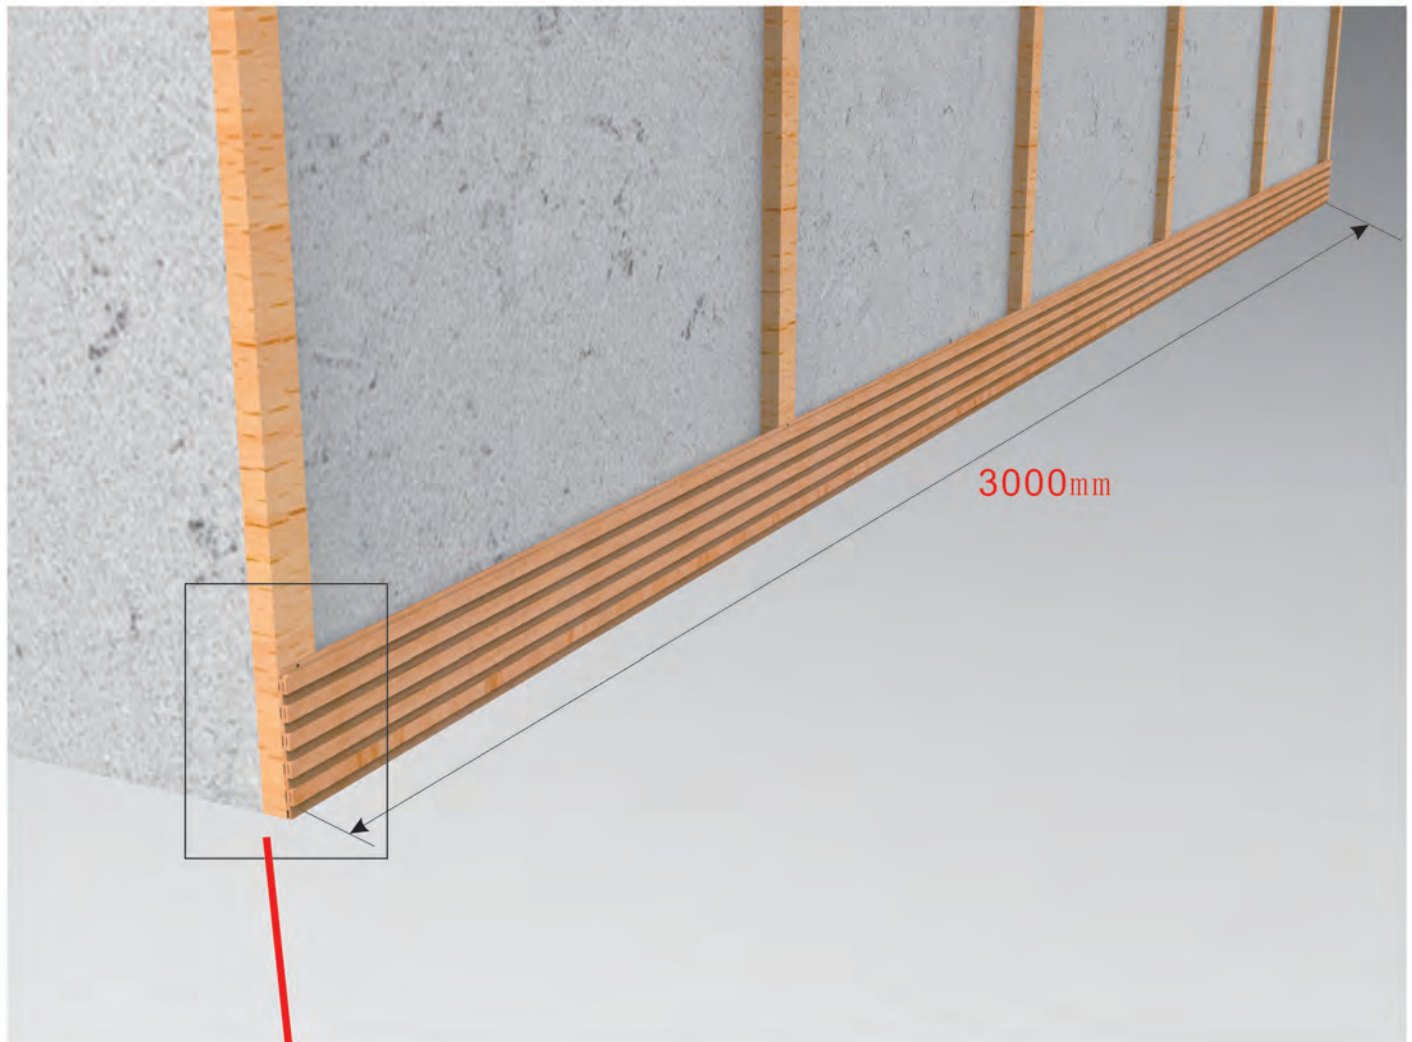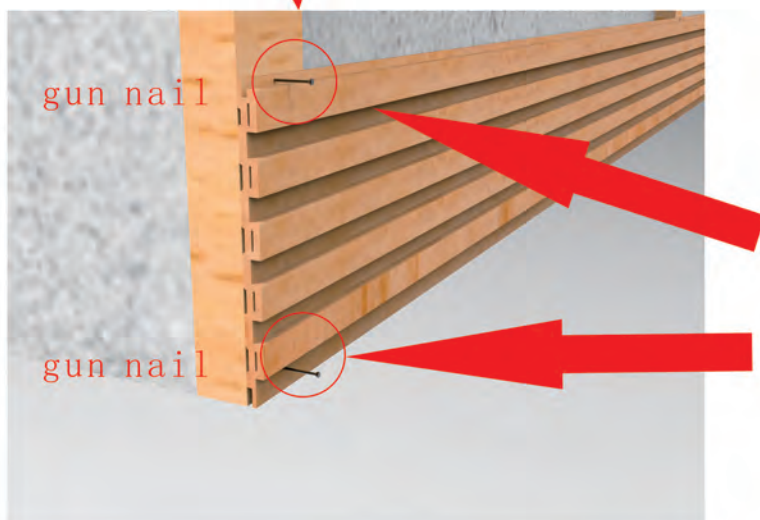

Step 3

Keep installing the wall cladding.


Pile up the pane on the slot 1, fix the panel on every joist by gun nail.

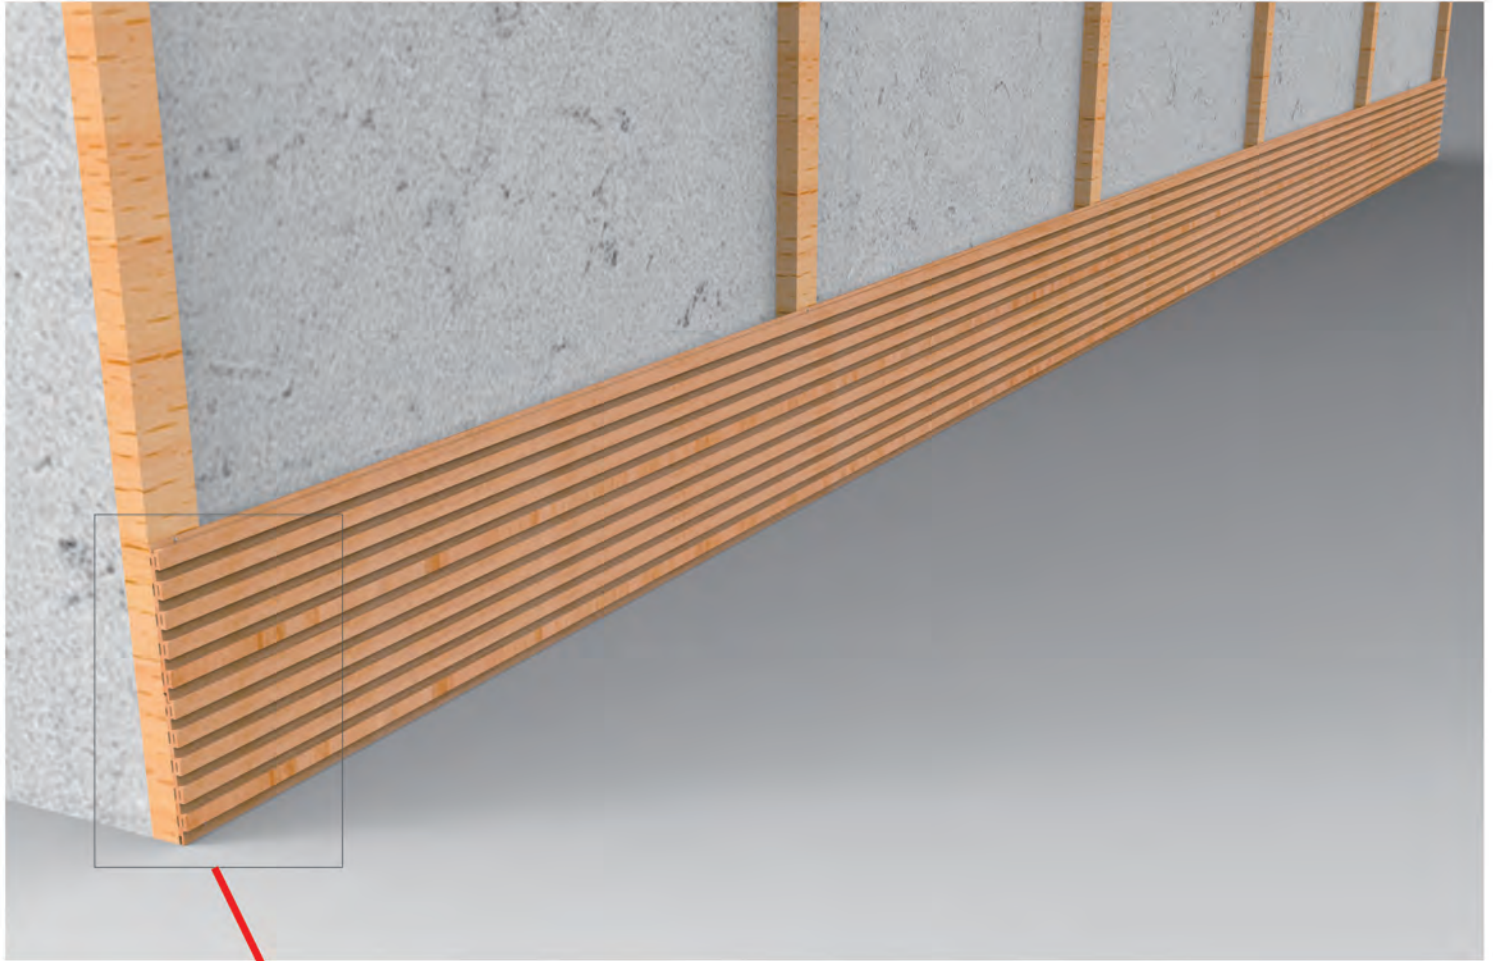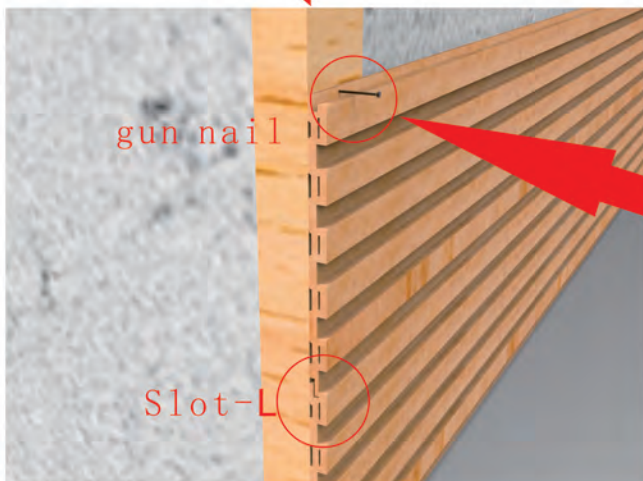


Step 4

Install the external corner

Stick the L- external corner on the wall board with PVC glue

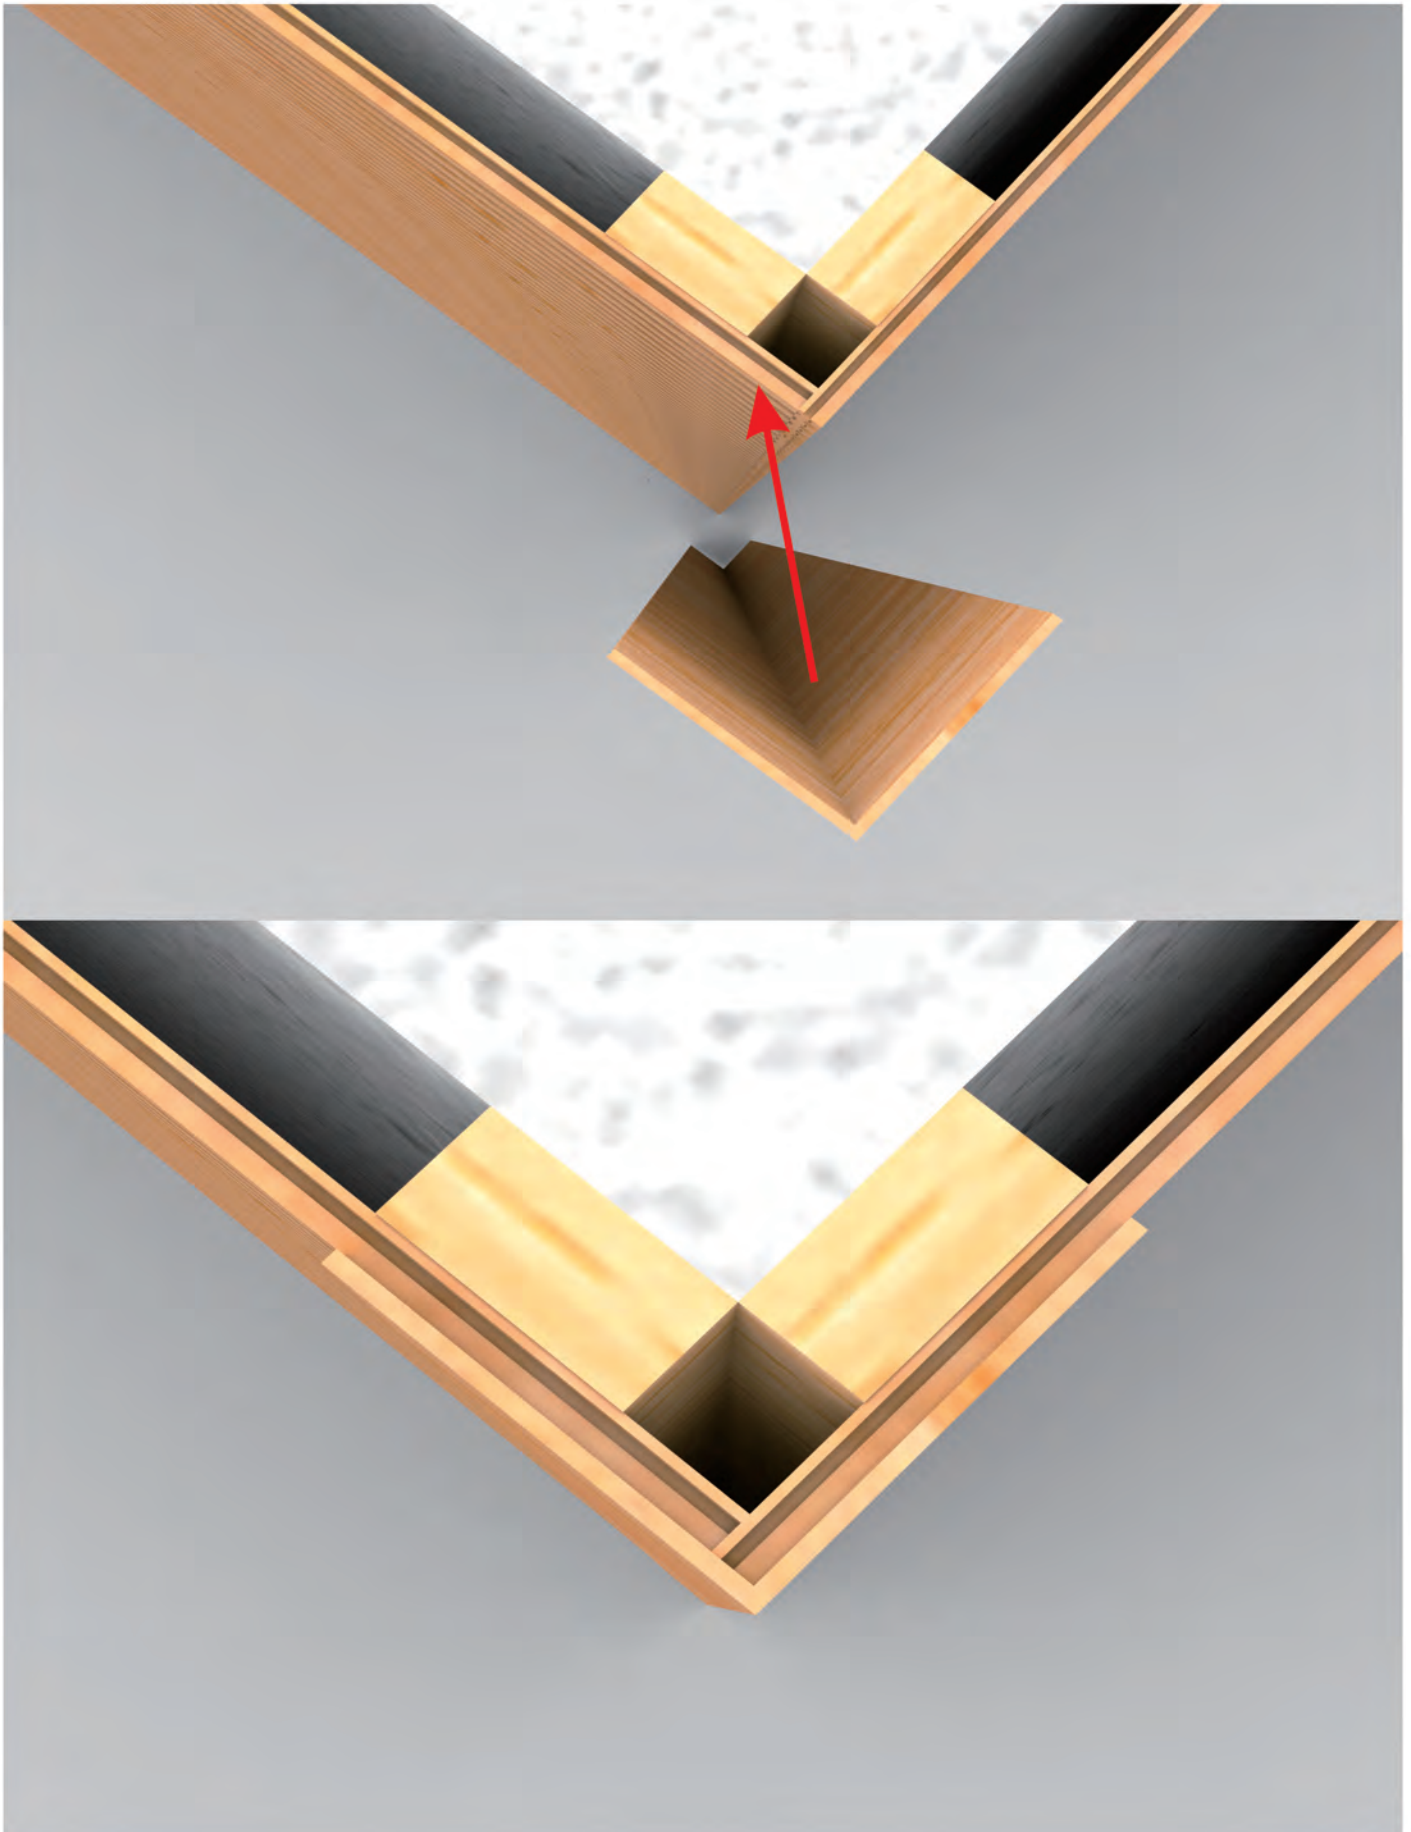

Internal corner installation

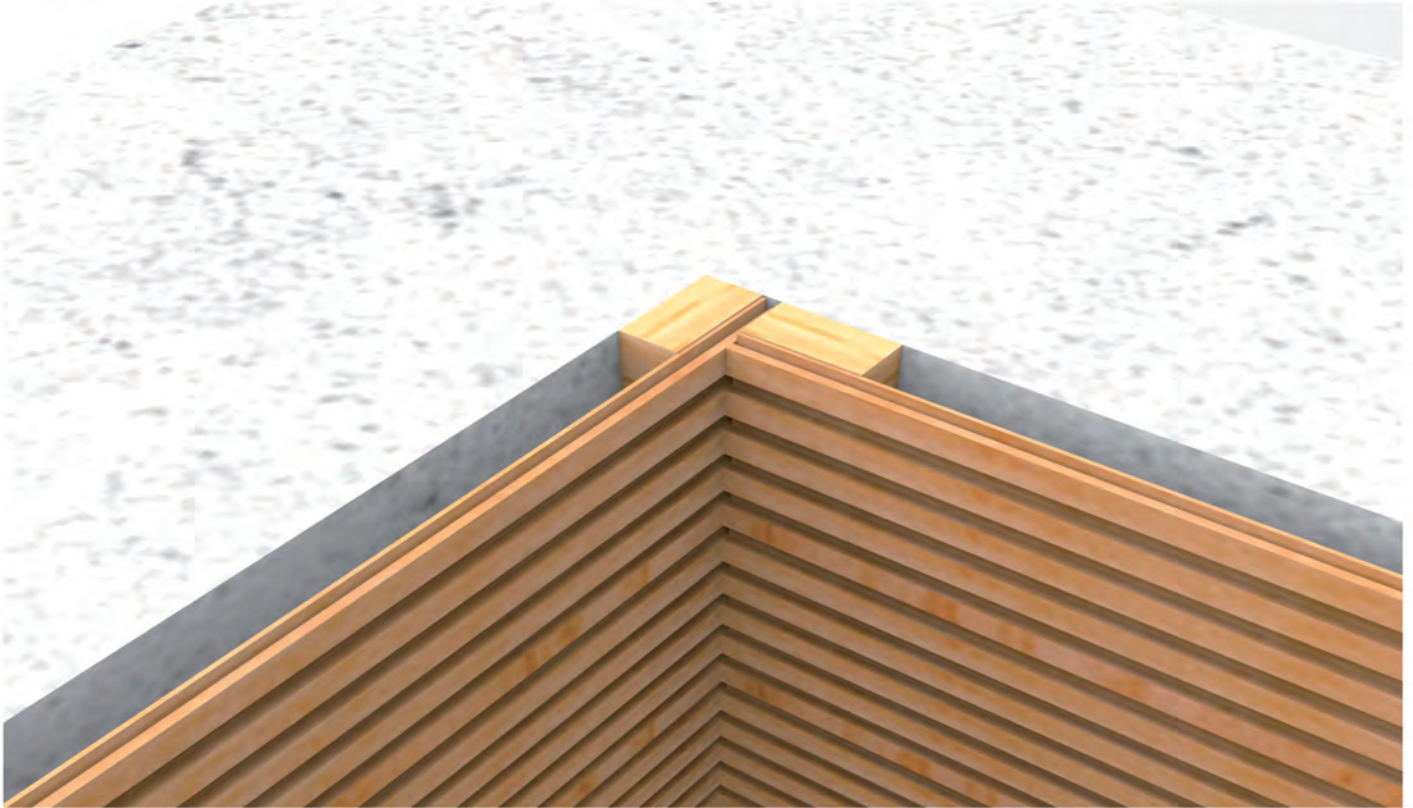

Project show

