



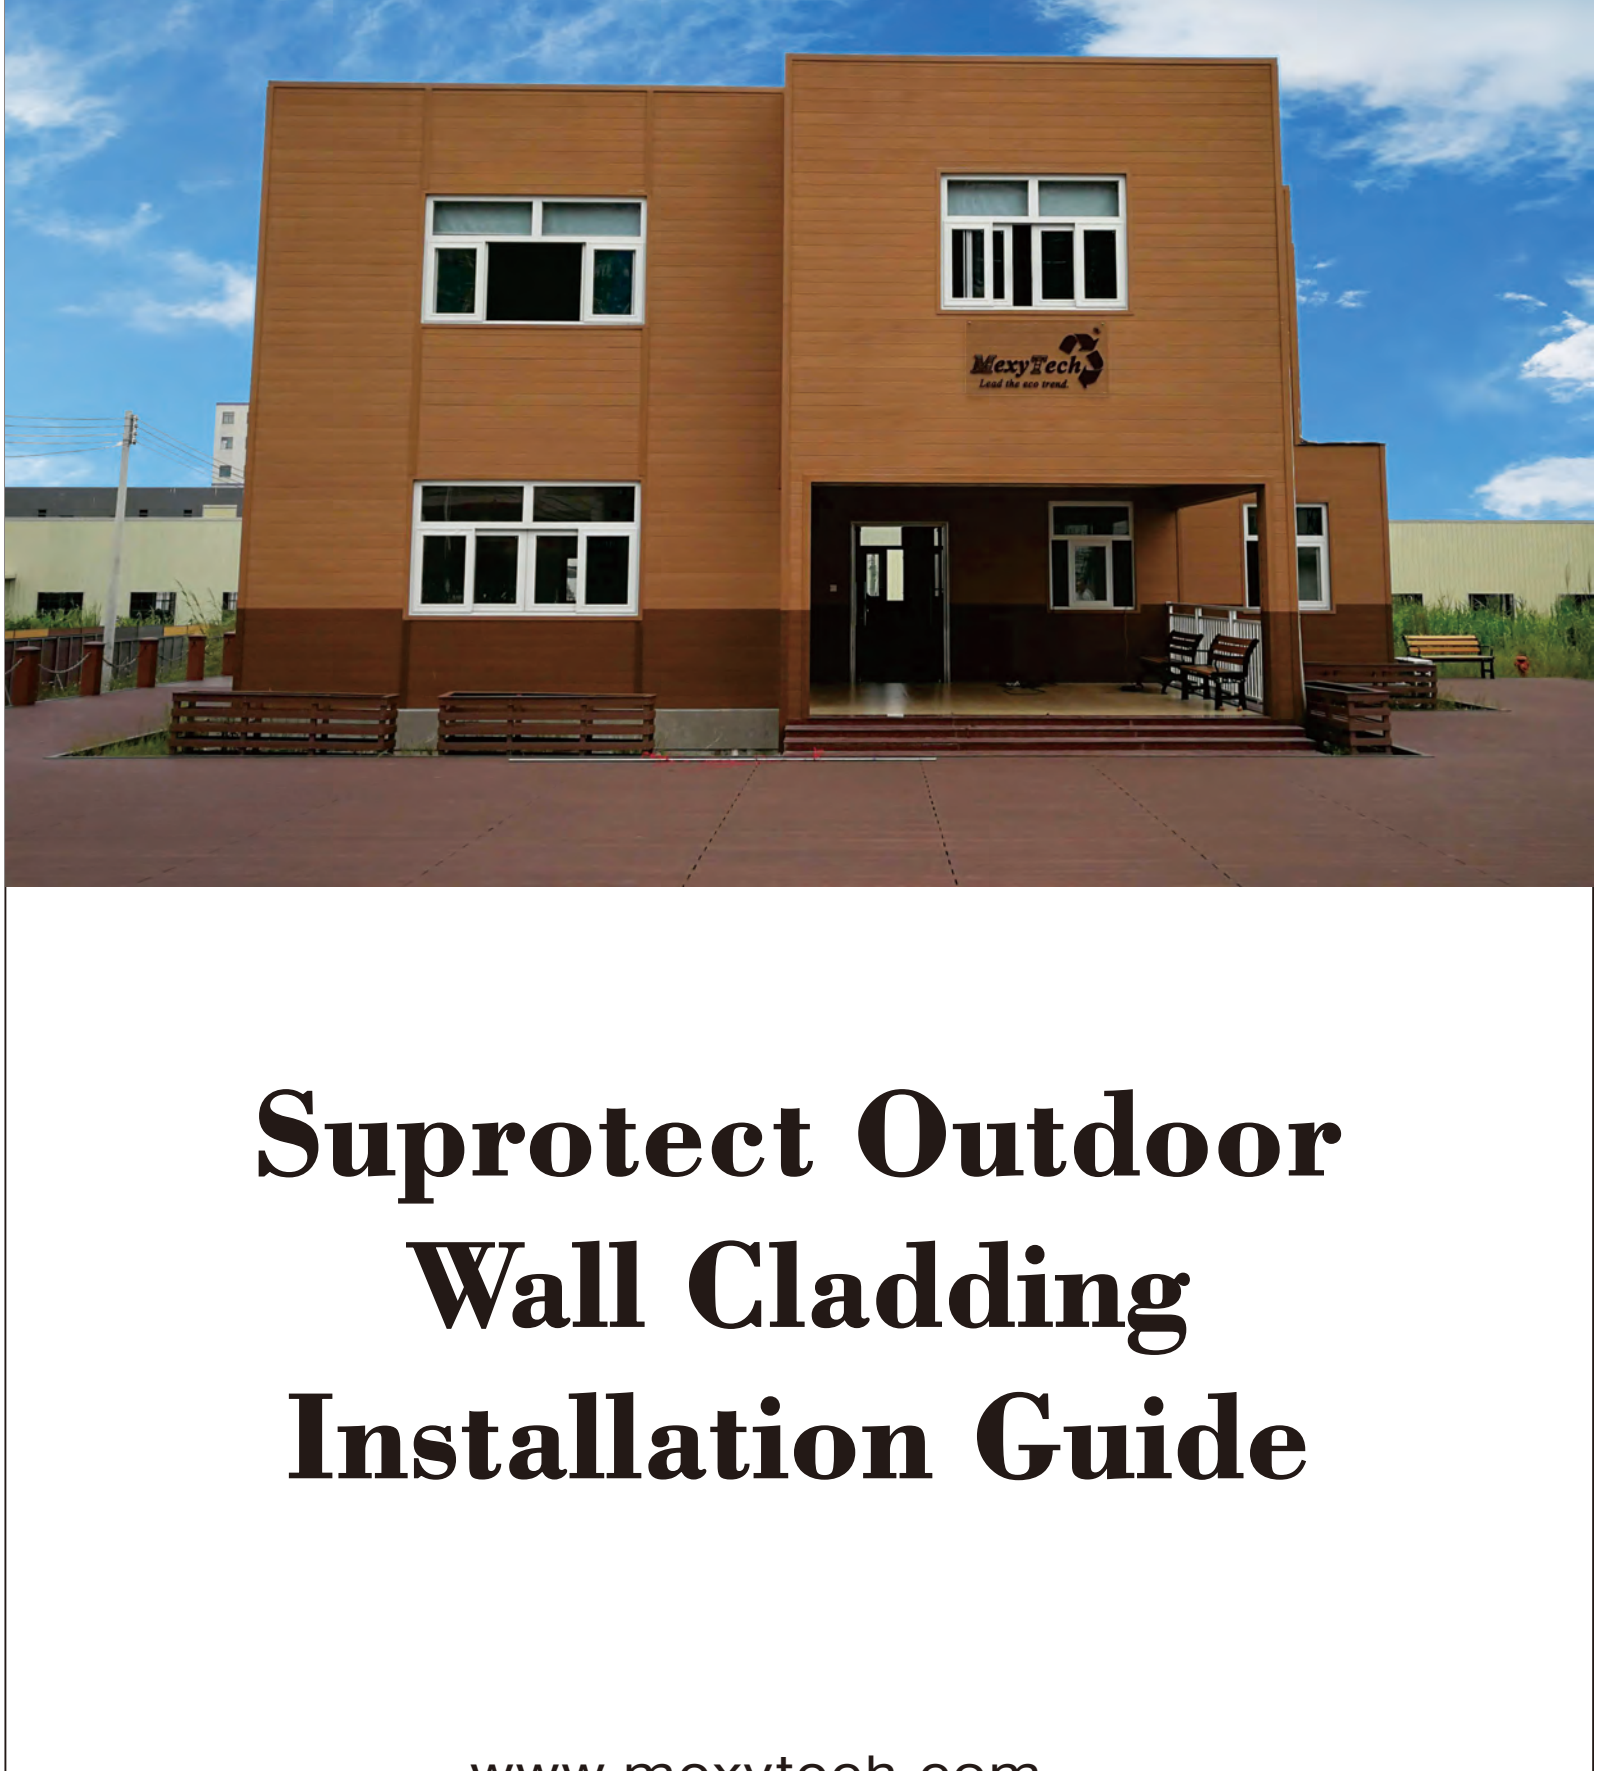

Suprotect Outdoor Wall Cladding Installation Guide

www.mexytech.com


Outdoor wall cladding Installation

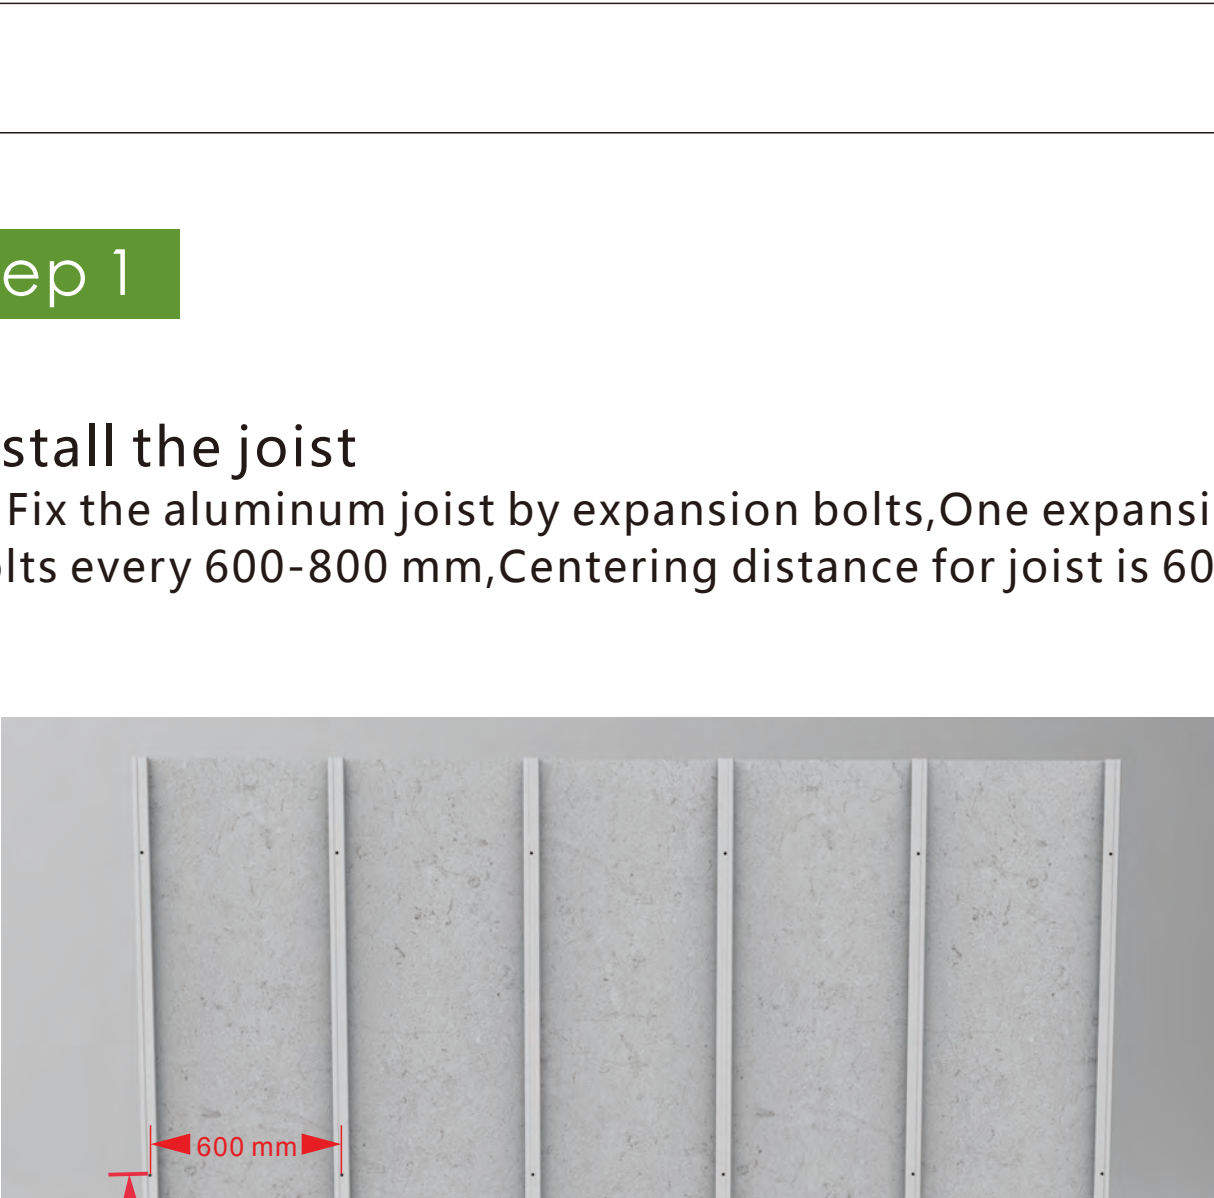

Step 1


Install the joist

Fix the aluminum joist by expansion bolts, One expansion bolts every 600-800 mm, Centering distance for joist is 600mm.

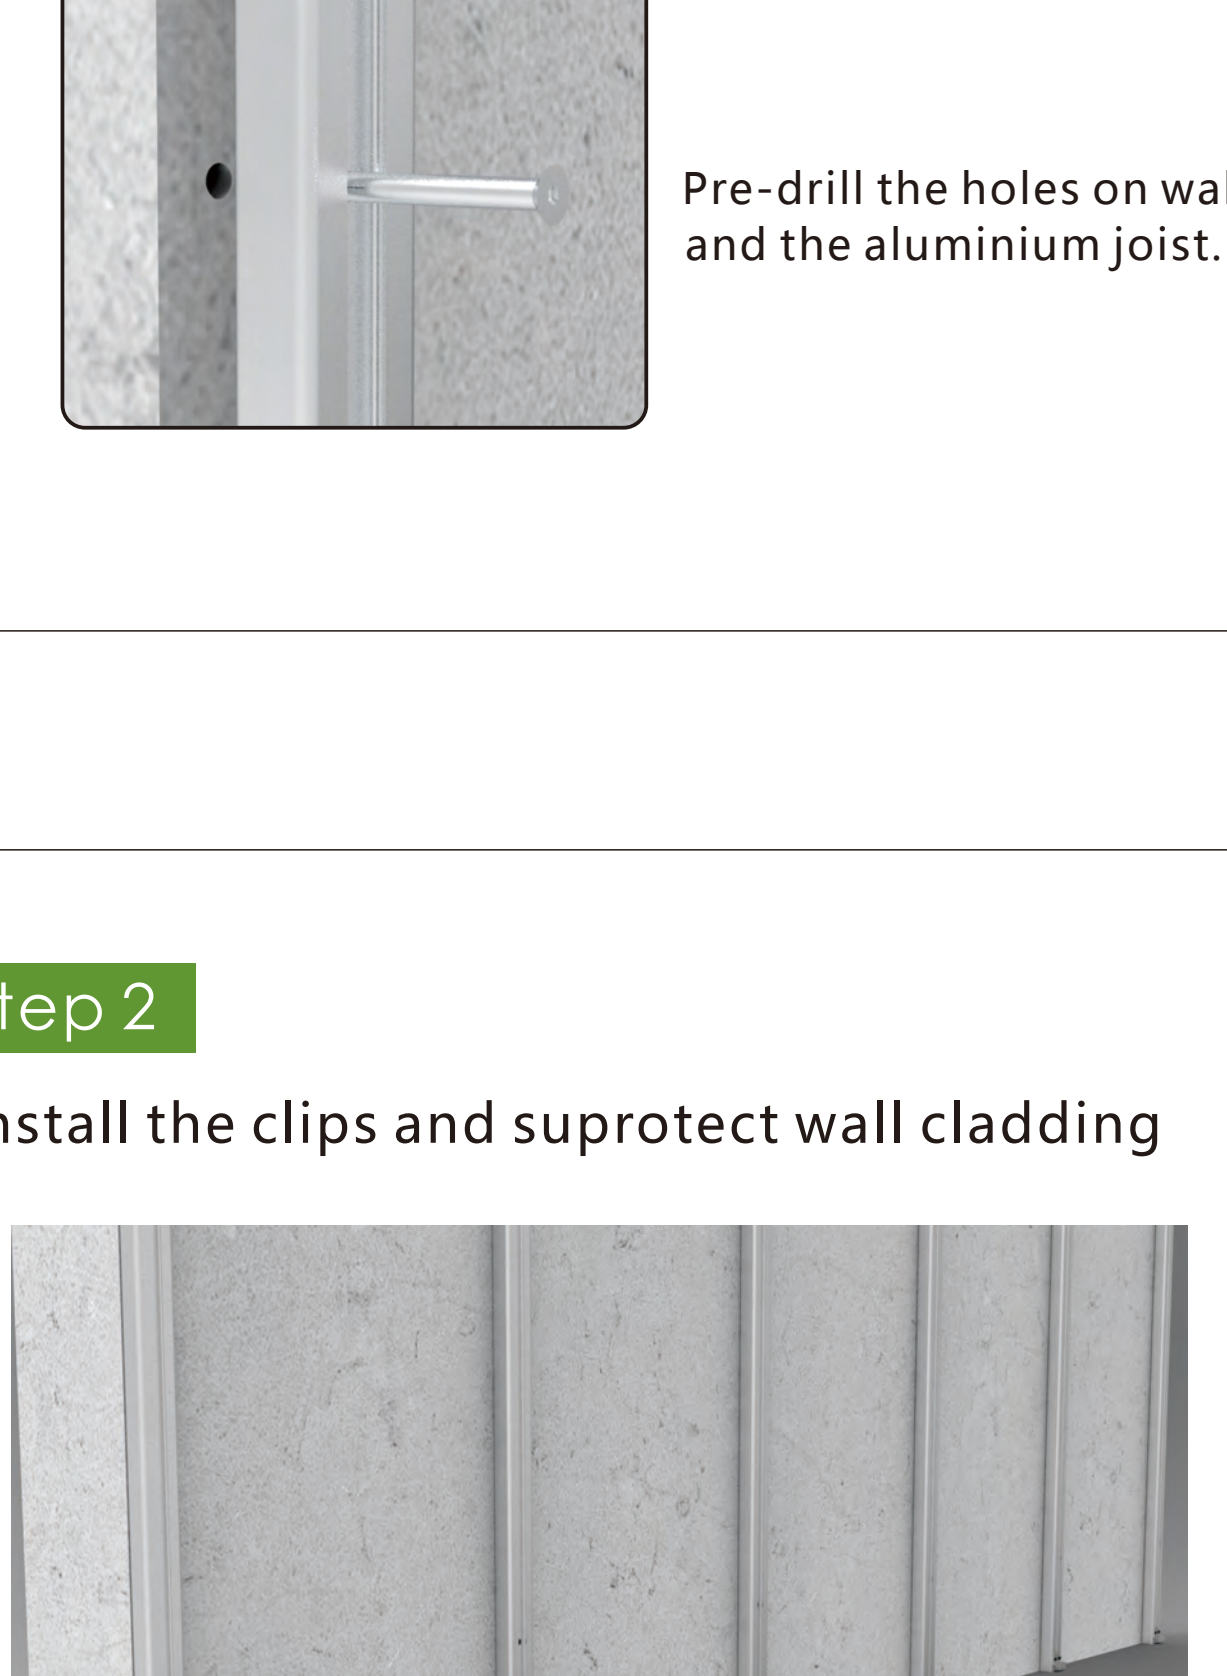

Step 2

Install the clips and suprotect wall cladding

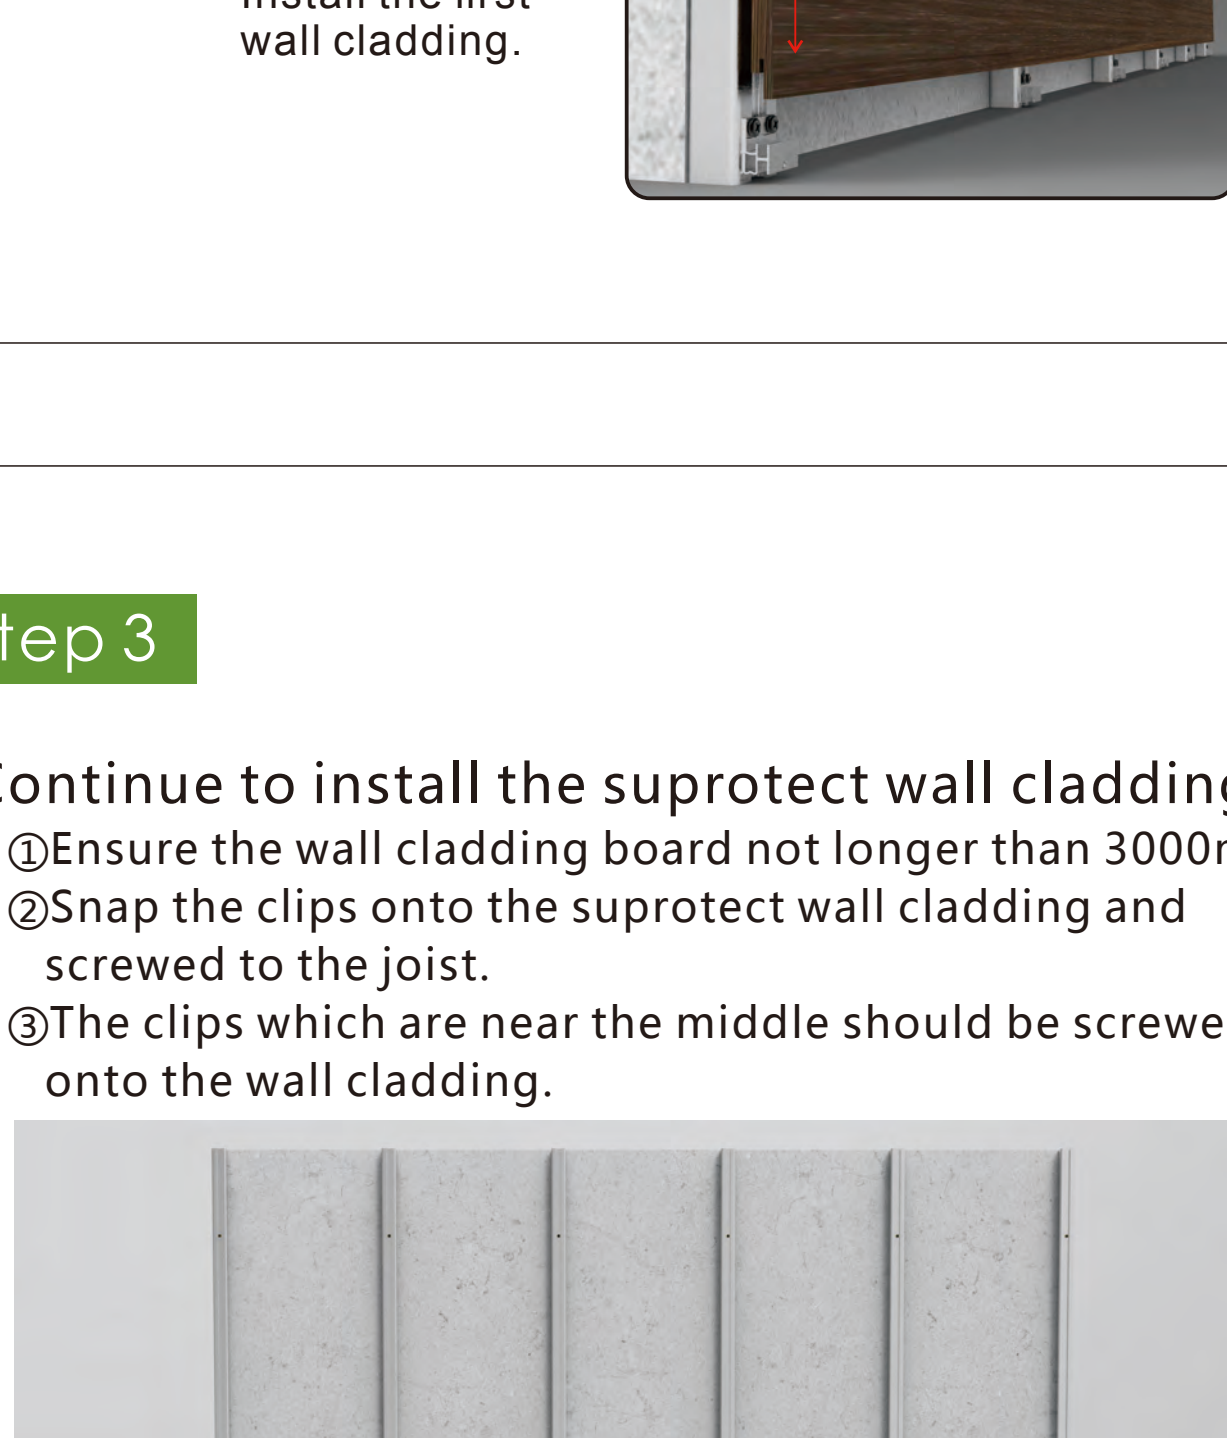

Step 3


Continue to install the suprotect wall cladding.

- ①Ensure the wall cladding board not longer than 3000mm.
- ②Snap the clips onto the suprotect wall cladding and screwed to the joist.
- ③The clips which are near the middle should be screwed onto the wall cladding.



Step 4

Install the last suprotect wall cladding.

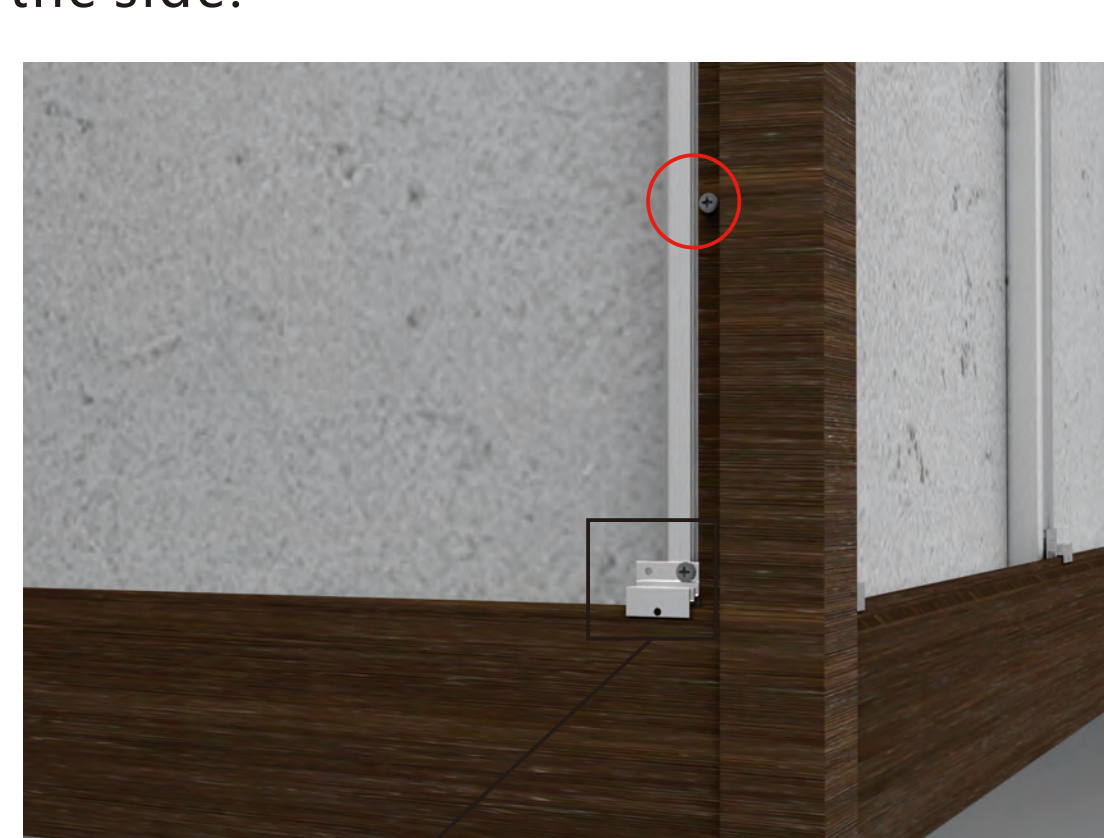


External Corner Installation

- ①Screw the external corner cover onto the joist every 1 meter on the both sides.
- ②The Clips need only be fixed by a screw on the side.




Side Cover Installation

- ①Screw the side cover onto the joist every 1 meter.

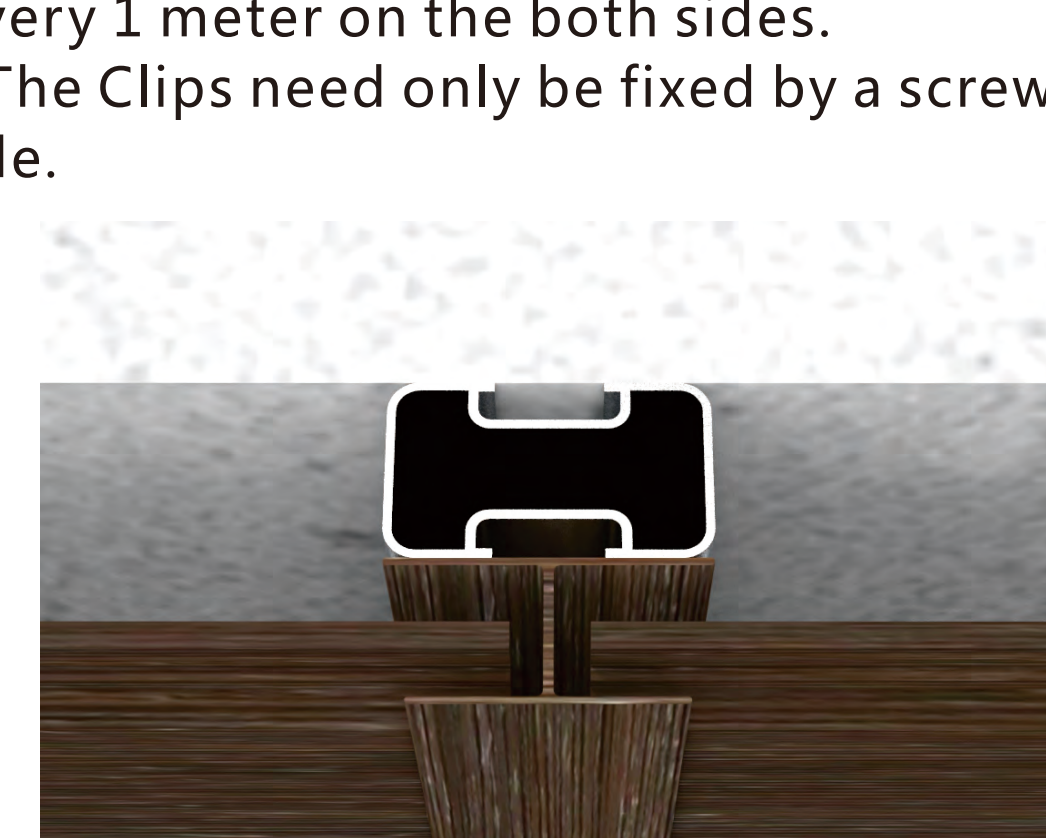

Connected Side Cover Installation

- ①Screw the connected side cover onto the joist every 1 meter on the both sides.
- ②The Clips need only be fixed by a screw on the side.

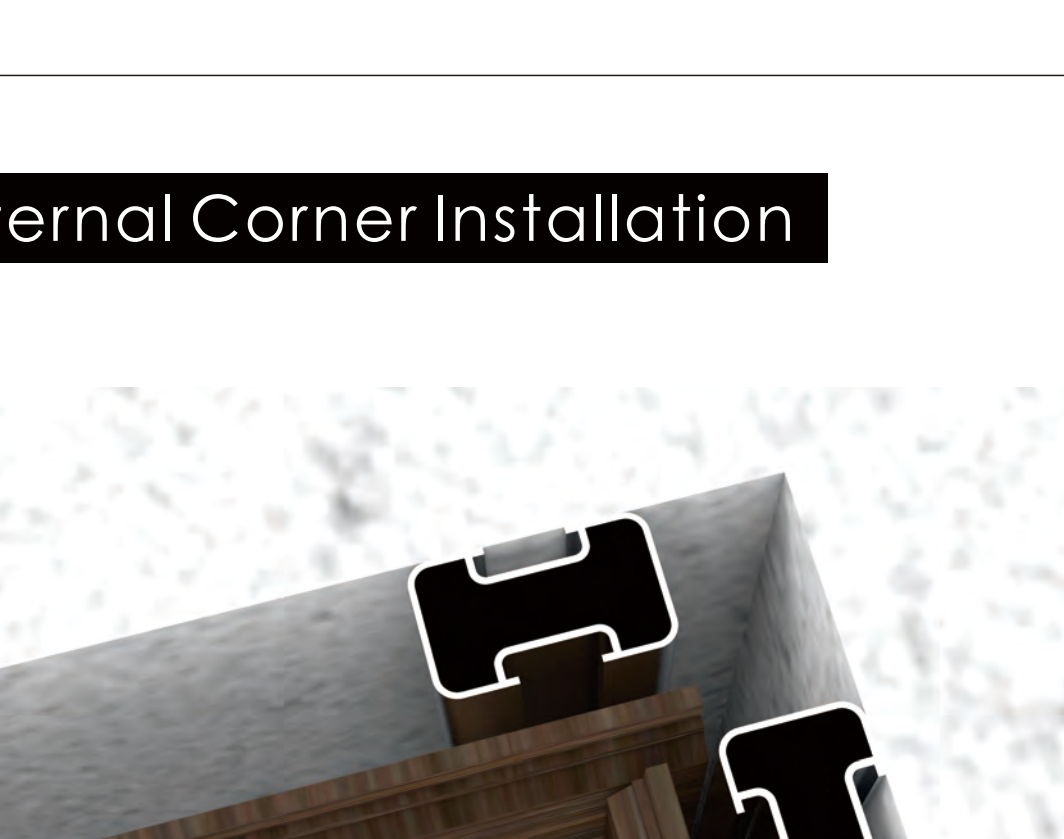

Internal Corner Installation



Installation Completed

