



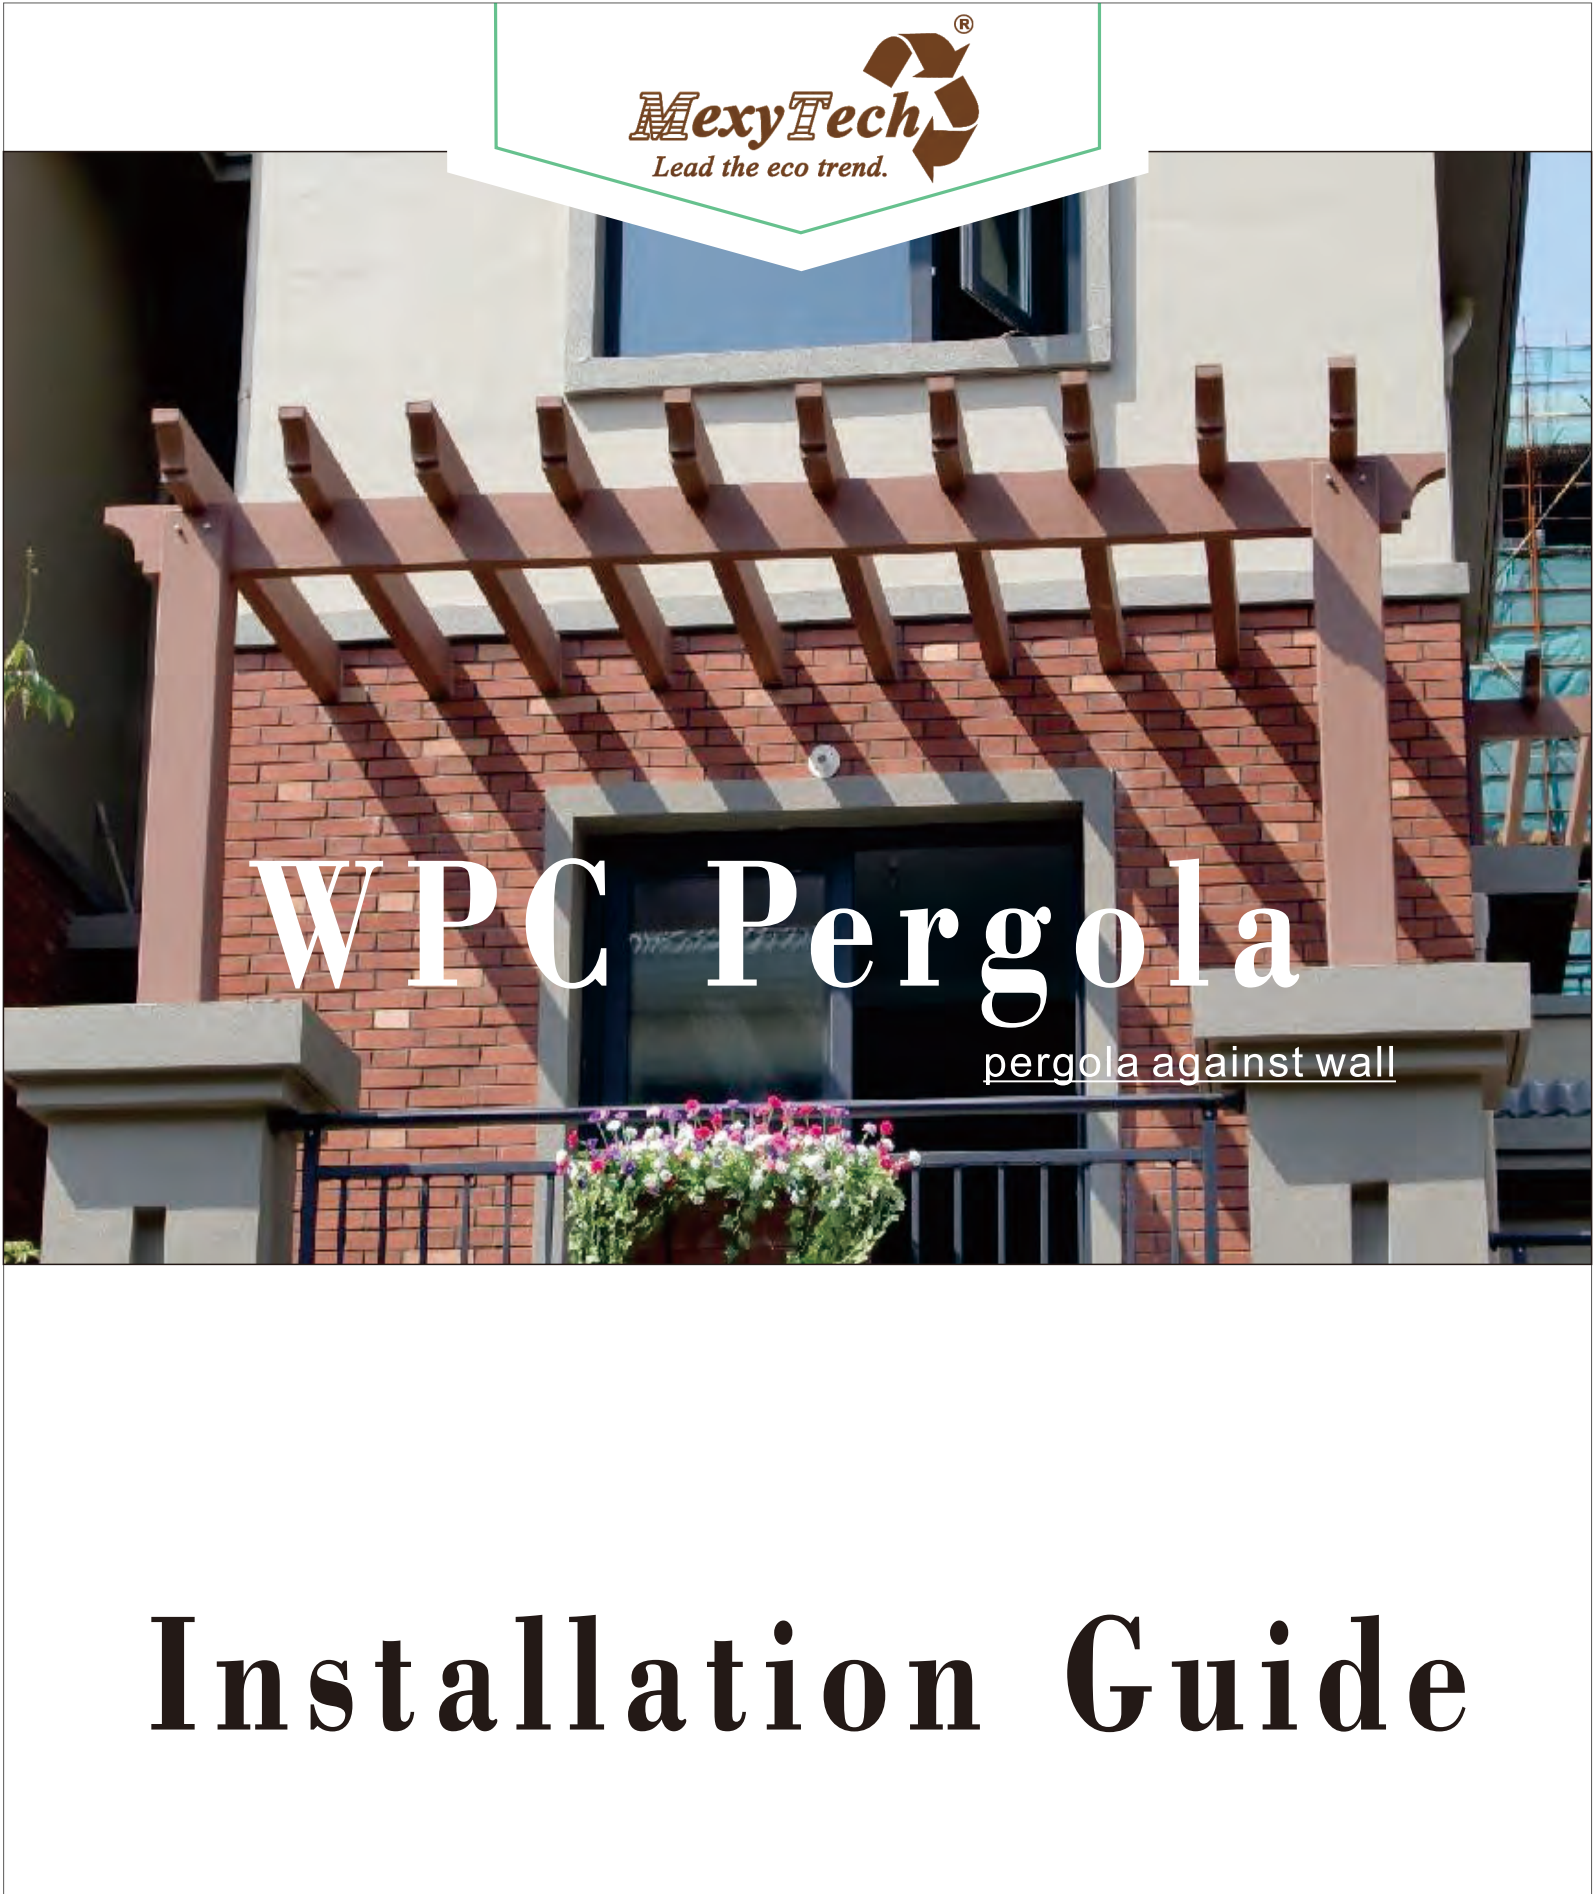

Installation Guide


www.mexytech.com

The installation instance of pergola against wall

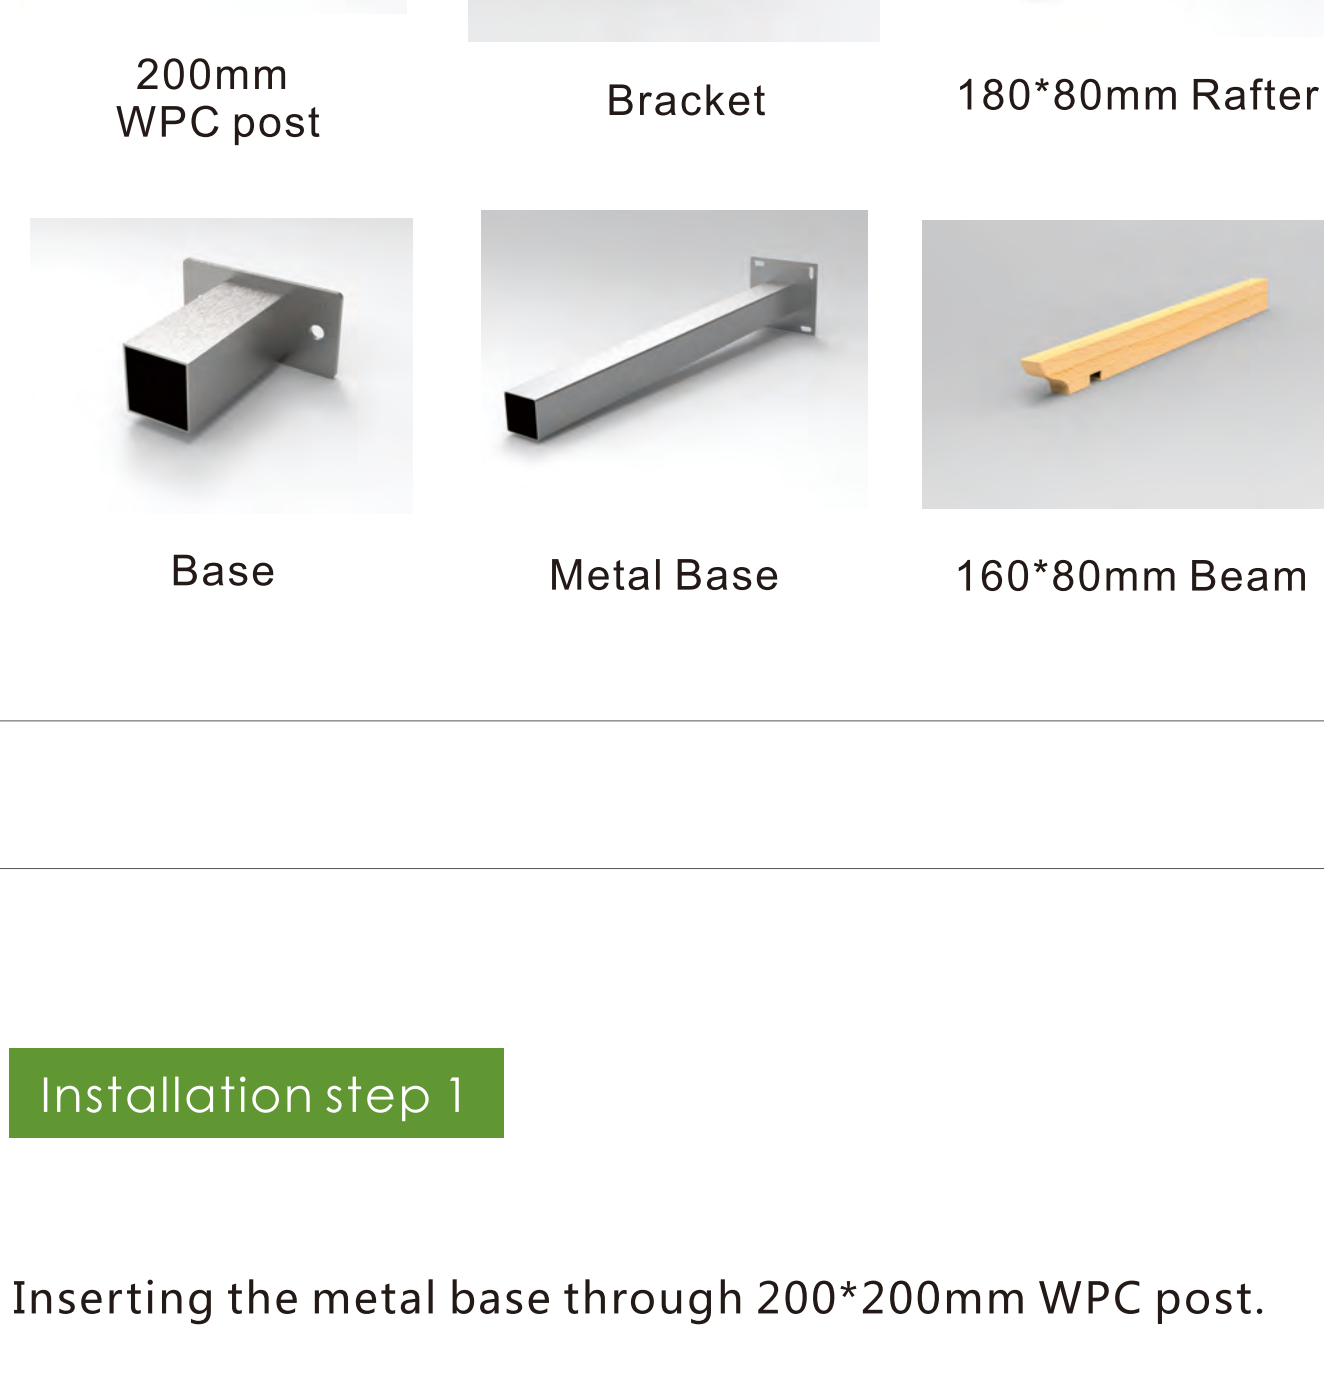


Installation step 1

Inserting the metal base through 200*200mm WPC post.

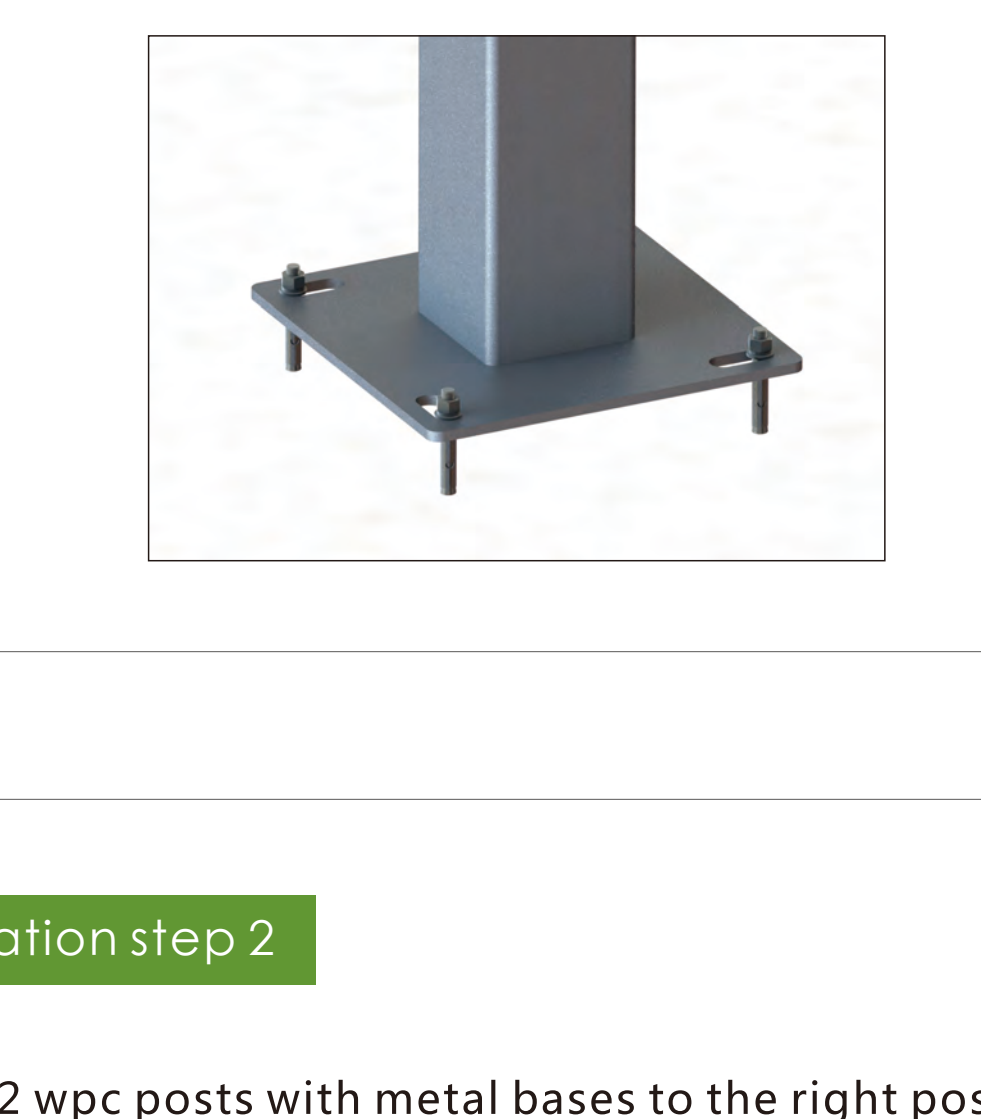

Installation step 2

Placing 2 wpc posts with metal bases to the right position, then fixing the metal base with expansion screws.

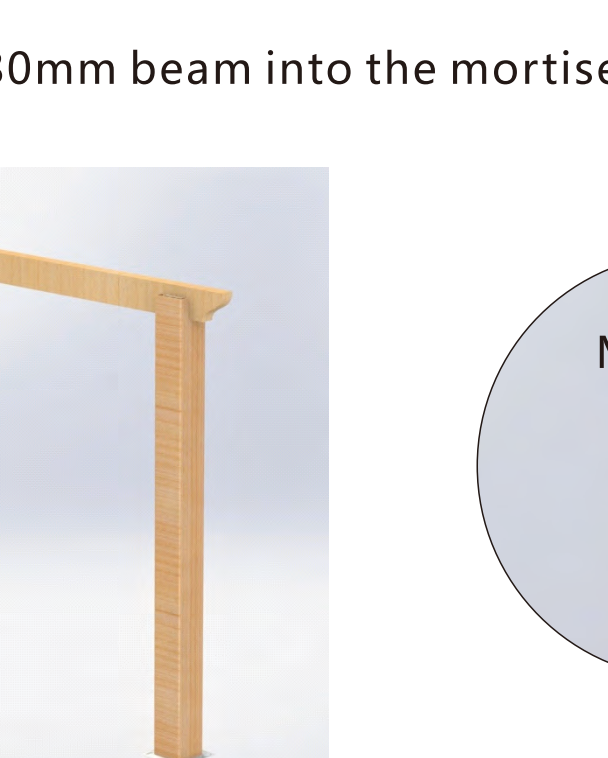


Installation step 3

Insert the 180*80mm beam into the mortise.



Installation step 4

Pre-drilling a hole, then fixing the beams with rivets.

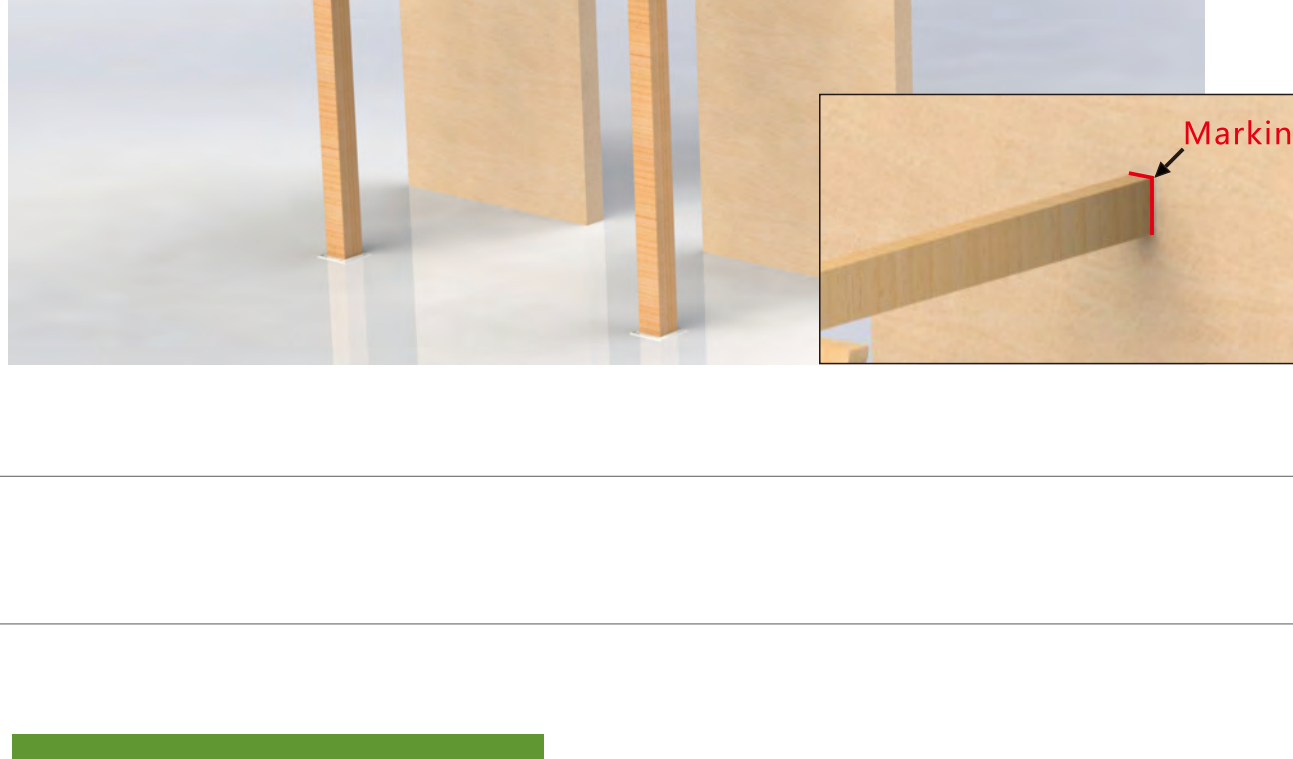

Installation step 5

Marking position for the base by placing a rafter.



Installation step 6

Fixing the base with screws according to the position marked in step 5.




Installation step 7

Encasing the rafter to the base, and inserting it into the beam.



Installation step 8

Fixing the rafter on the beam with screws and brackets.

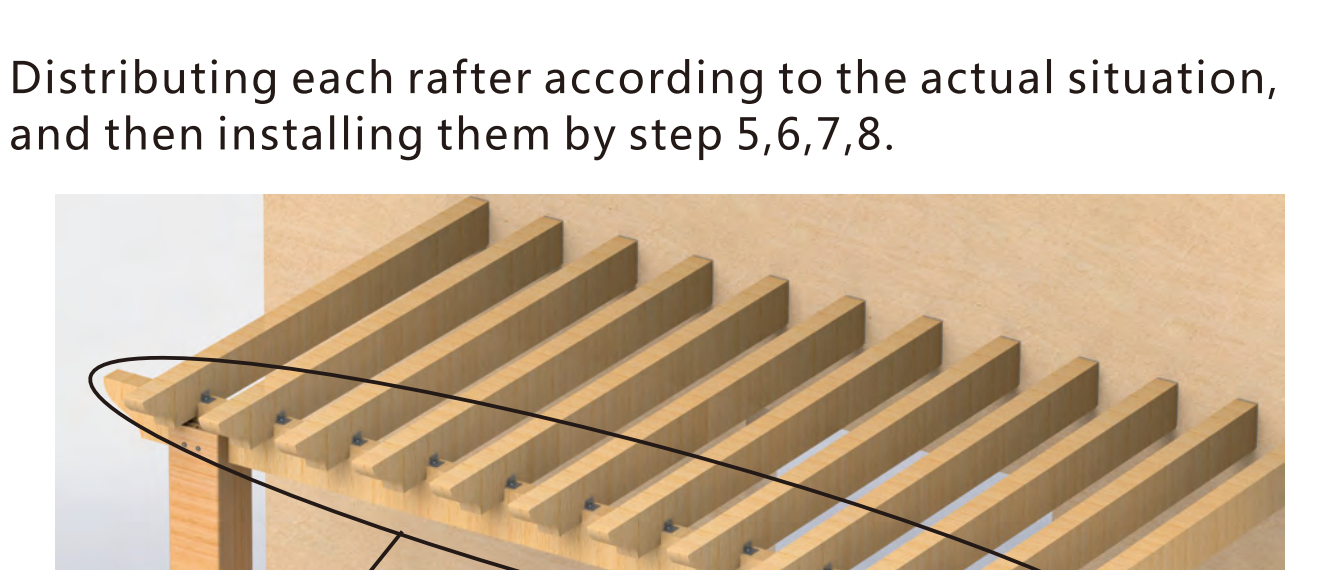

Installation step 9

Distributing each rafter according to the actual situation, and then installing them by step 5,6,7,8.



Installation done

