



WPC Pergola

Installation Guide

www.mexytech.com

The installation instance of pergola



180*80mm Rafter




160x80mm Beam



Metal Base




200mm WPC post

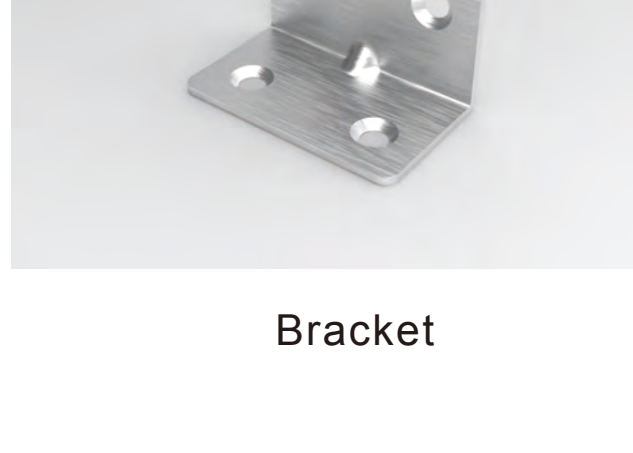

Bracket

Installation step 1

Inserting the metal base through 200*200mm WPC post.

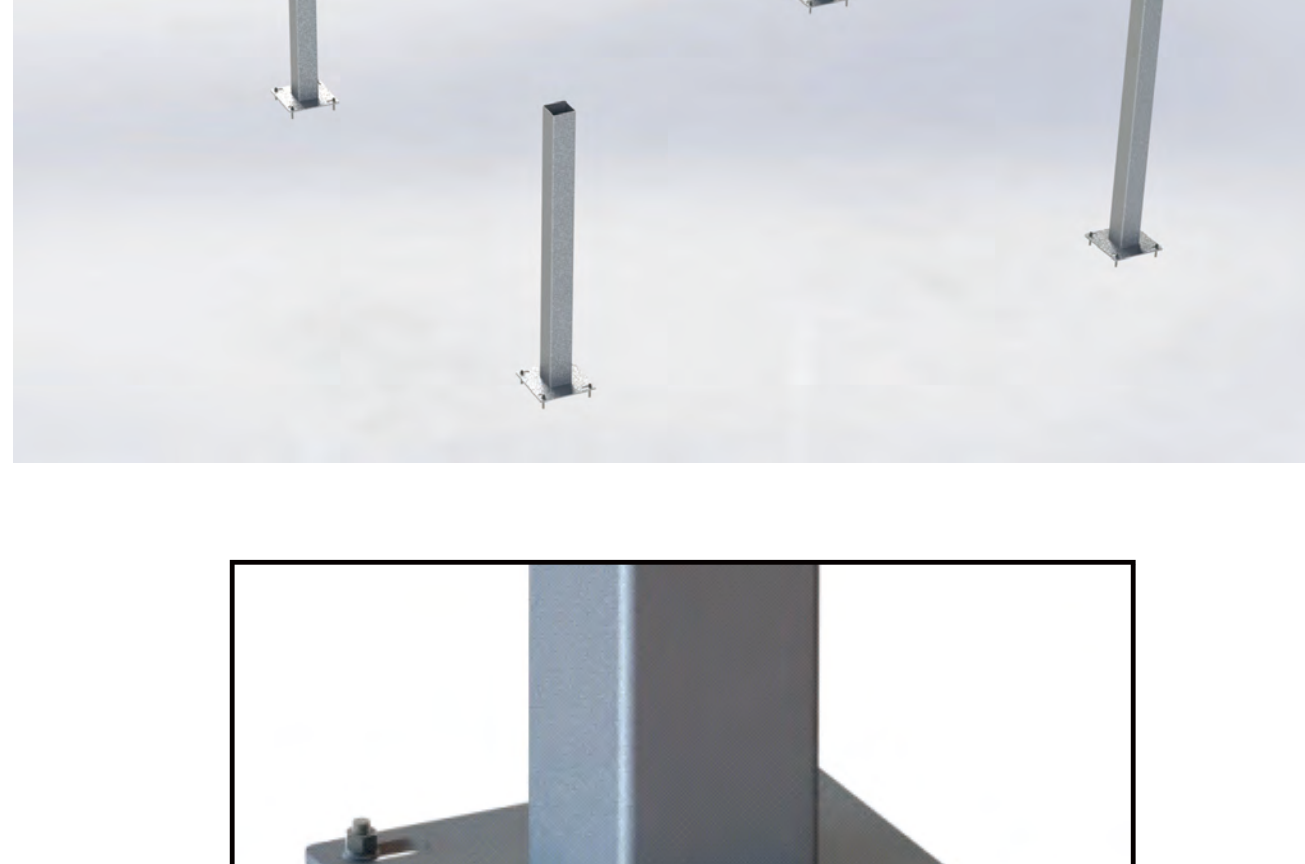


Installation step 2

Placing 4 wpc posts with metal bases to the right position. Then fixing the metal base with expansion screws.




Installation step 3

Insert the 180*80mm beam into the mortise.

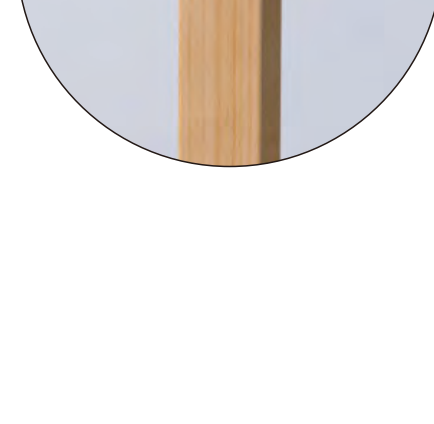



Installation step 4

Pre-drilling a hole, then fixing the beam with rivets.

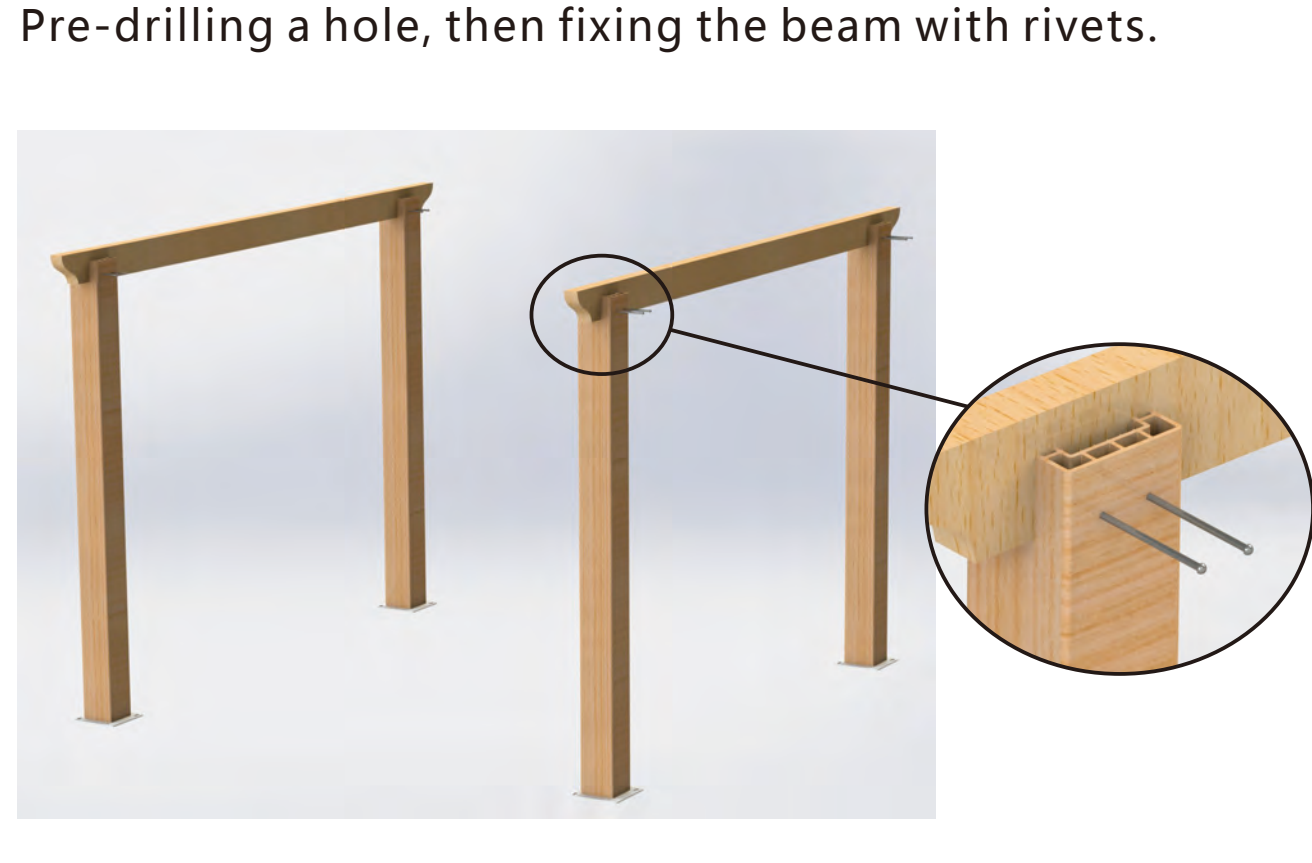

Installation step 5

Inserting the wpc rafters into the beam. Then fixing it by using brackets and screws at both left and right side.

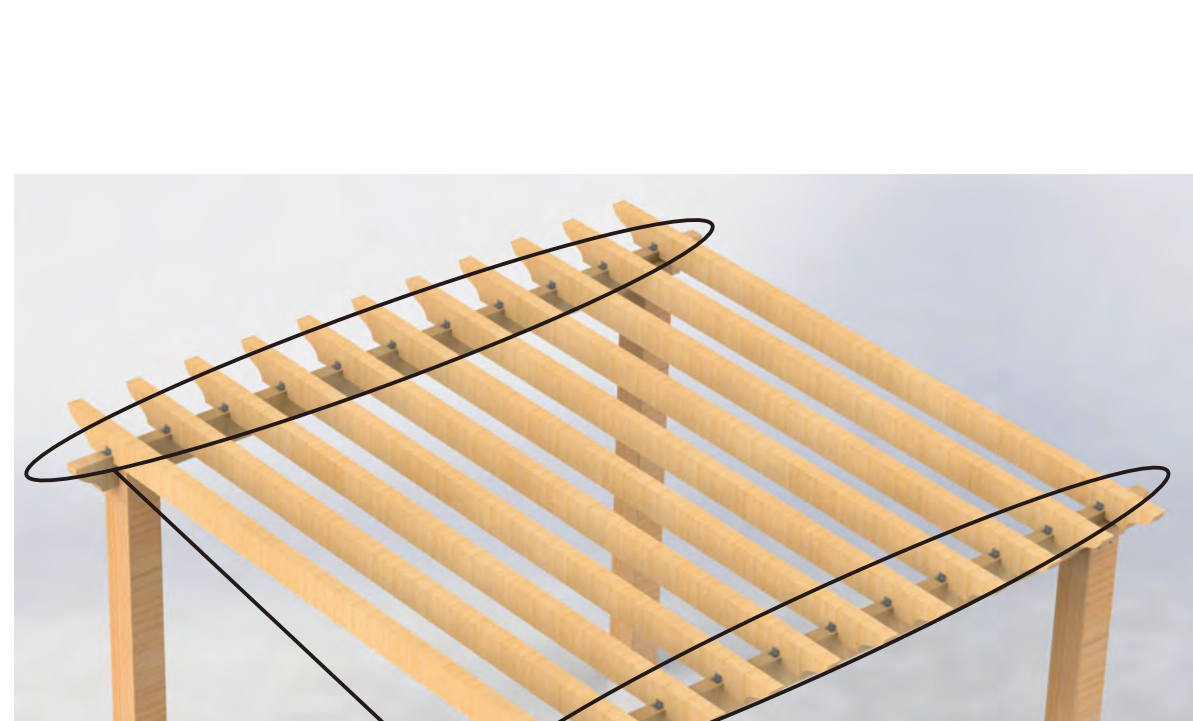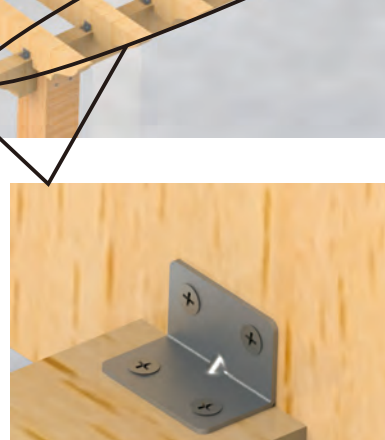

Installation done

