



Decking Installation Guide

WPC Joist System

Foshan MexyTech Co., Ltd

Decking Installation Guide

WPC joist system

1, Make sure the ground is even, and then lay the wpc joists on the ground. Make a undercourse under the joists if the ground is not even. (joist span is listed below)




model	joist span(mm)
SB03	350
ML02	400
OR02	450

2, Fix the joists tight onto the ground by using screws or cement.




3, When install the first decking board, fix the side clips onto the joists first.

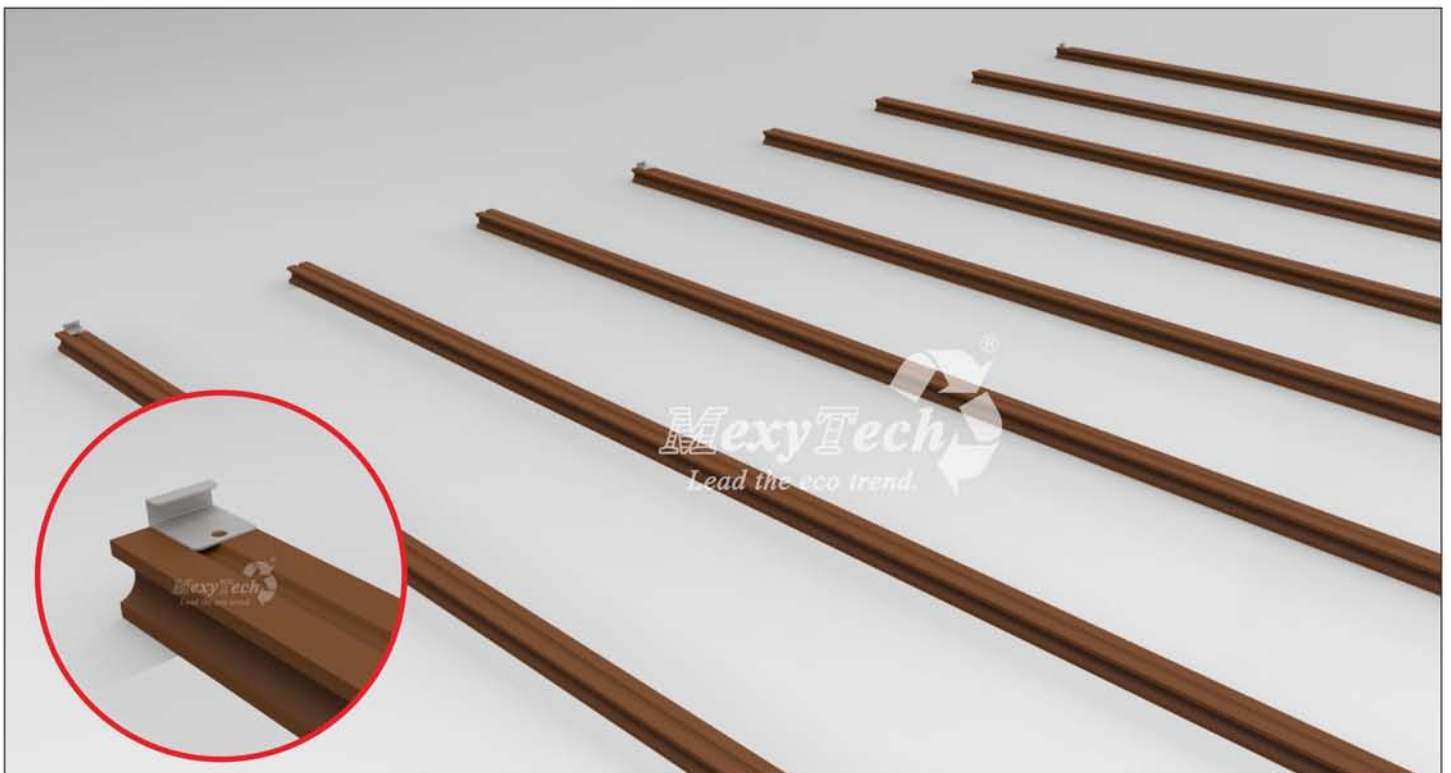

4, Push the deck board tight to the side clips.
Suggested length for actual application is not longer than 2.75 meters one piece.



- 5, ①Put the special clip with a side hole into the middle of the decking side groove.
②Make sure the toothed side into the decking groove
③Screw through the side hole and fix the clip to decking board.

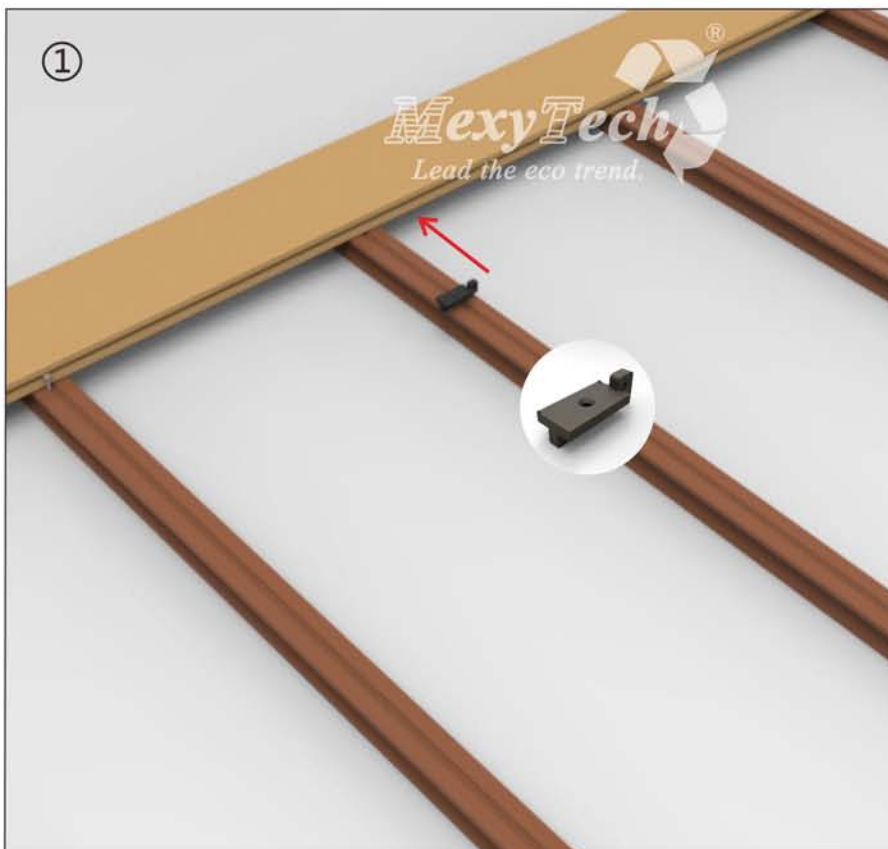

- 6, ①Put the normal clips for the rest.
②Make sure the toothed side to the groove.




- 7, ①Slide another board to the clips to the right position.
②Fix the decking through the top holes of the clips.



8, Repeat the steps above for the decking installation.



Make sure the gap between cross sections of decking boards no less than 3mm.

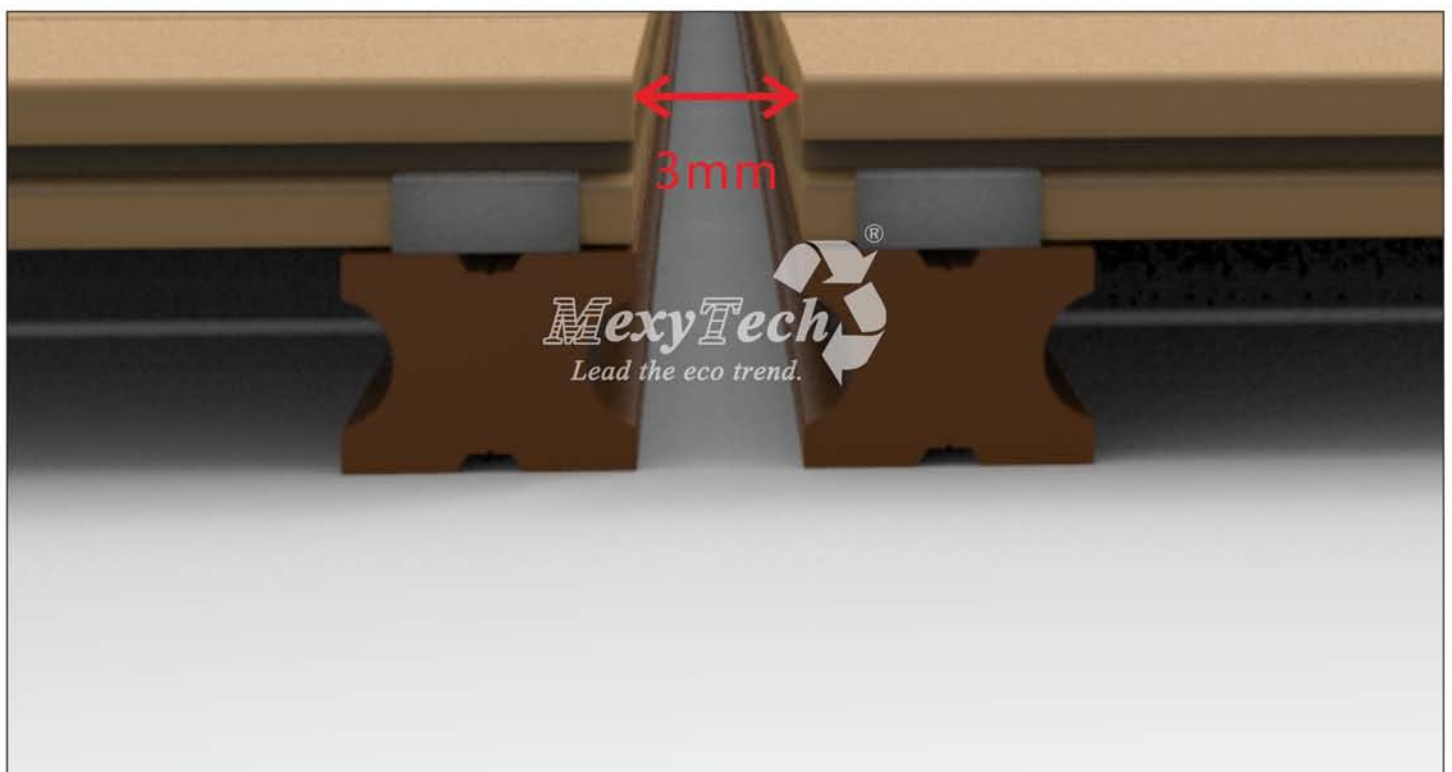

Make sure 10mm gaps to the walls for the expansion or contract.



9, Predrill a hole like the pic shown below and then screw the decking board to the joist.



10, Fix the fascias.



11, Job finished.