




OUTDOOR WALL CLADDING INSTALLATION GUIDE


Step 1: Install the joist

- ★ Fix the aluminum joist by expansion bolts.
- ★ One expansion bolts every one meter.
- ★ Centering distance for joist is 600mm.

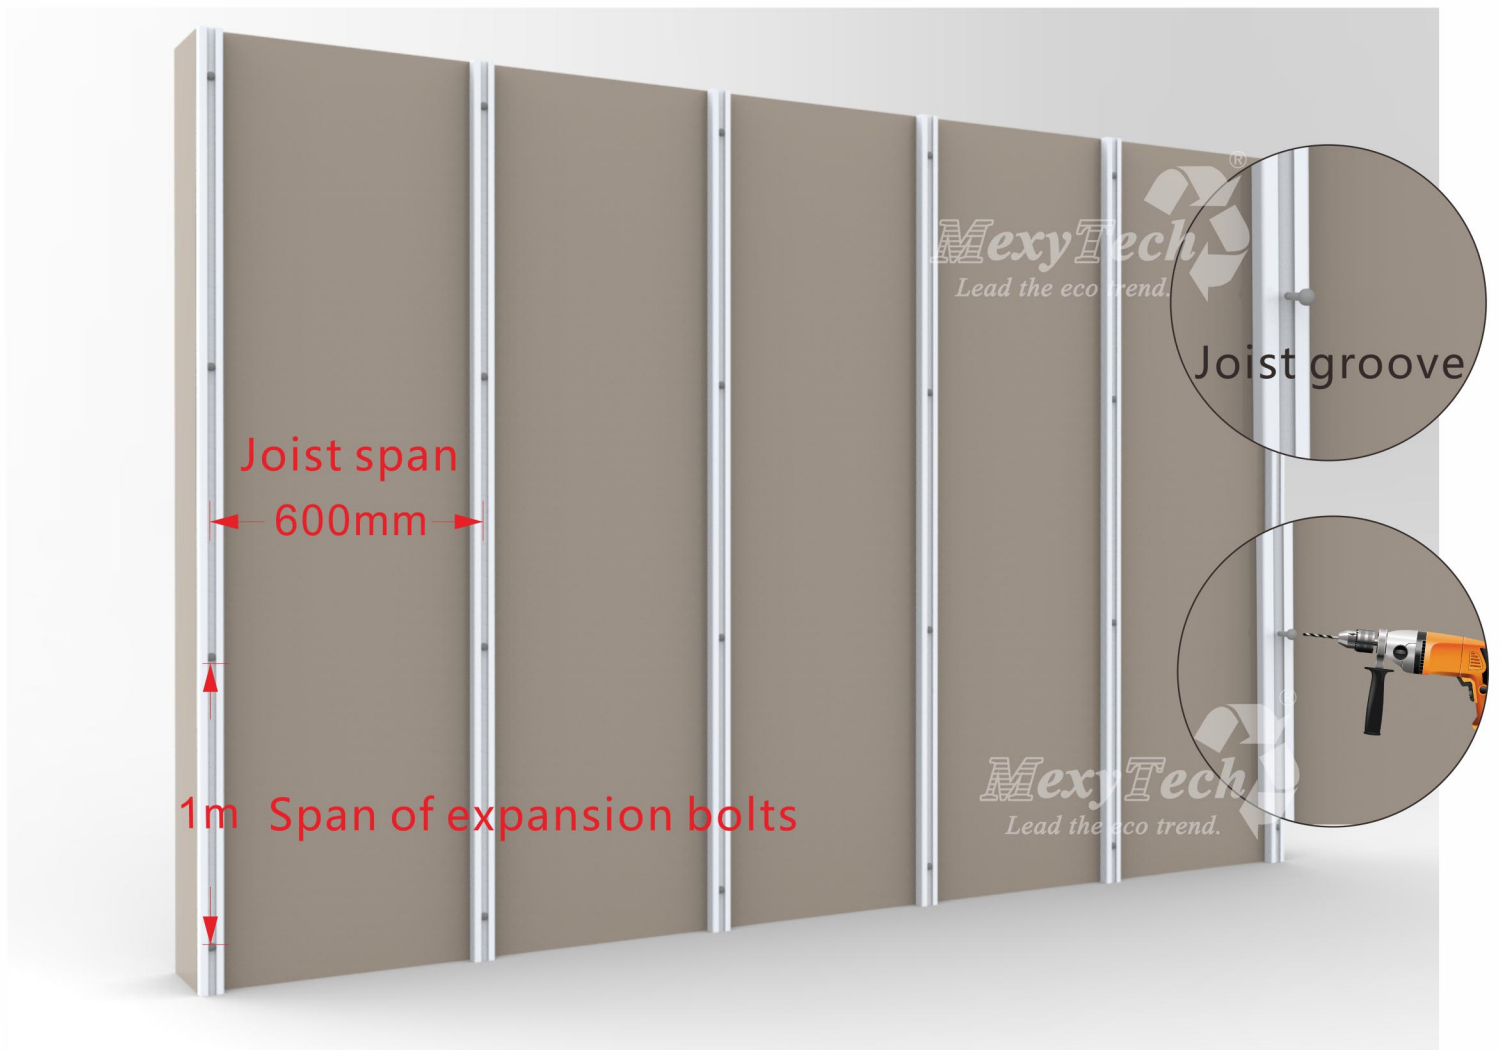

Step 2: Install the wall cladding

★ Make sure the wall cladding board not longer than 3000mm.

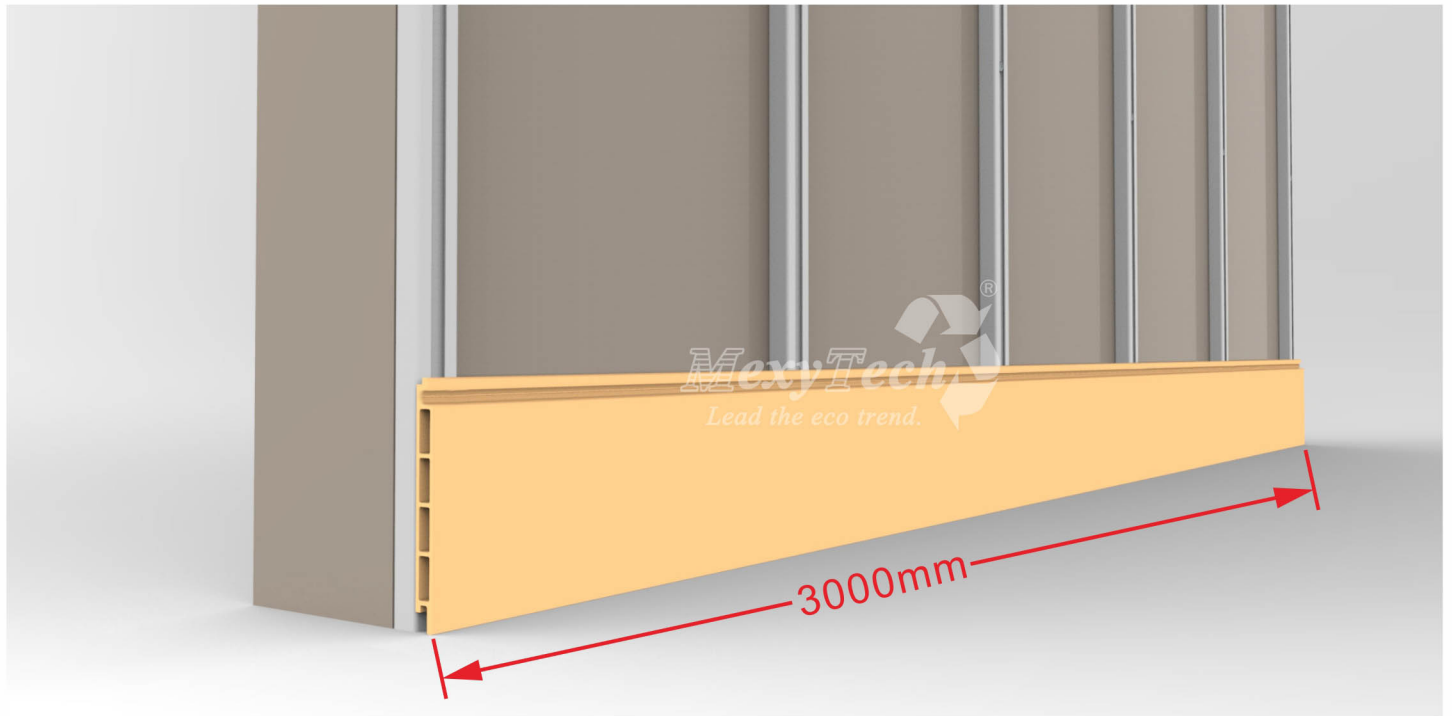


★ Make sure the diameter of the prebored hole is 1mm larger than the diameter of screw.



★ Suggest to use M4 or M6 screw.
★ 2 screws for one joist.





- ★ 3mm gap between board connection.



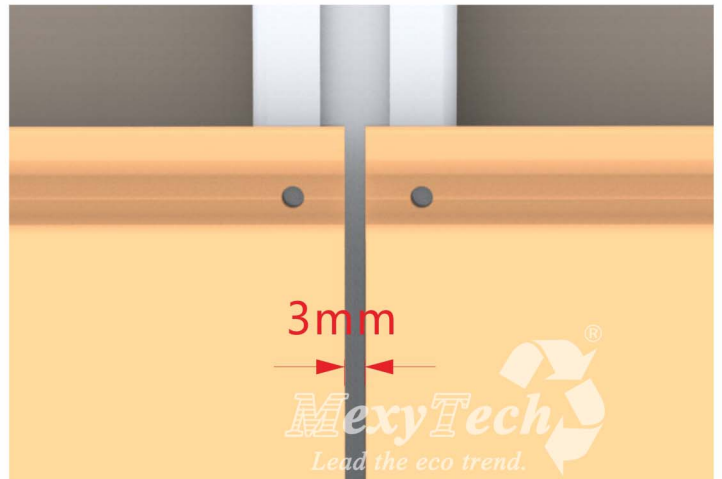


Step 3: keep installing the wall cladding


- ★ At least 1mm gap between the upper and lower board.
Suggest to use 1mm pad as auxiliary tools. (as the photo)

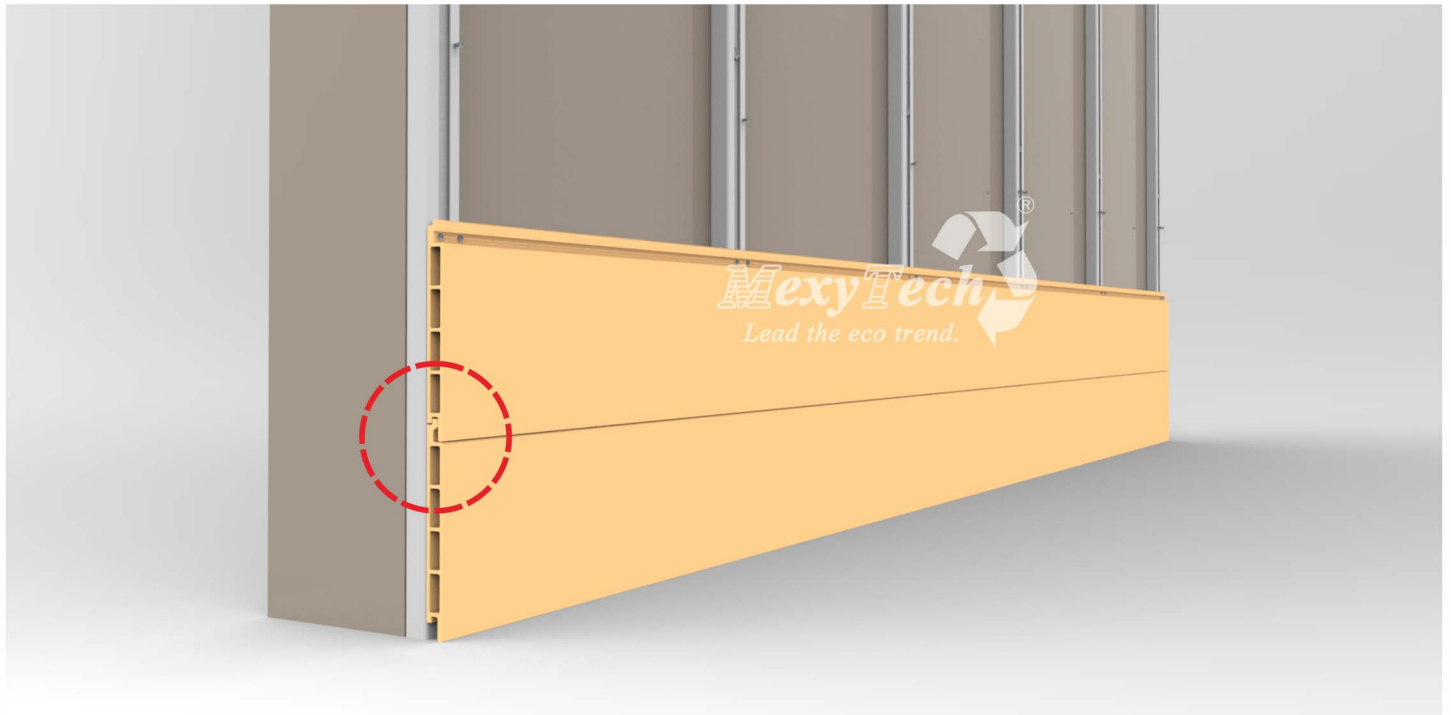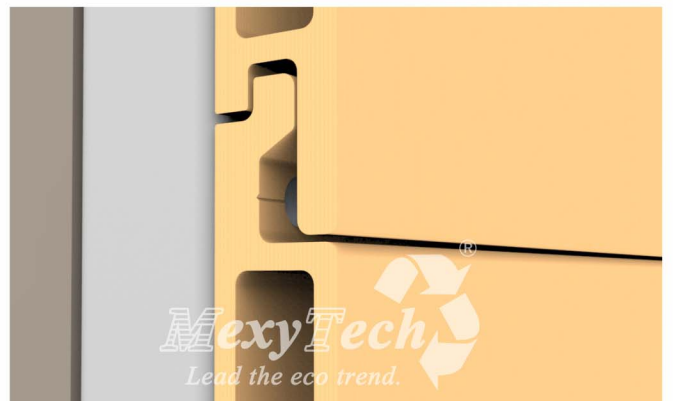

- ★ If there is a external corner, use a external corner cover.
- ★ fix the prebored wall panel and external corner cover to the joist.
- ★ One screw every one meter.

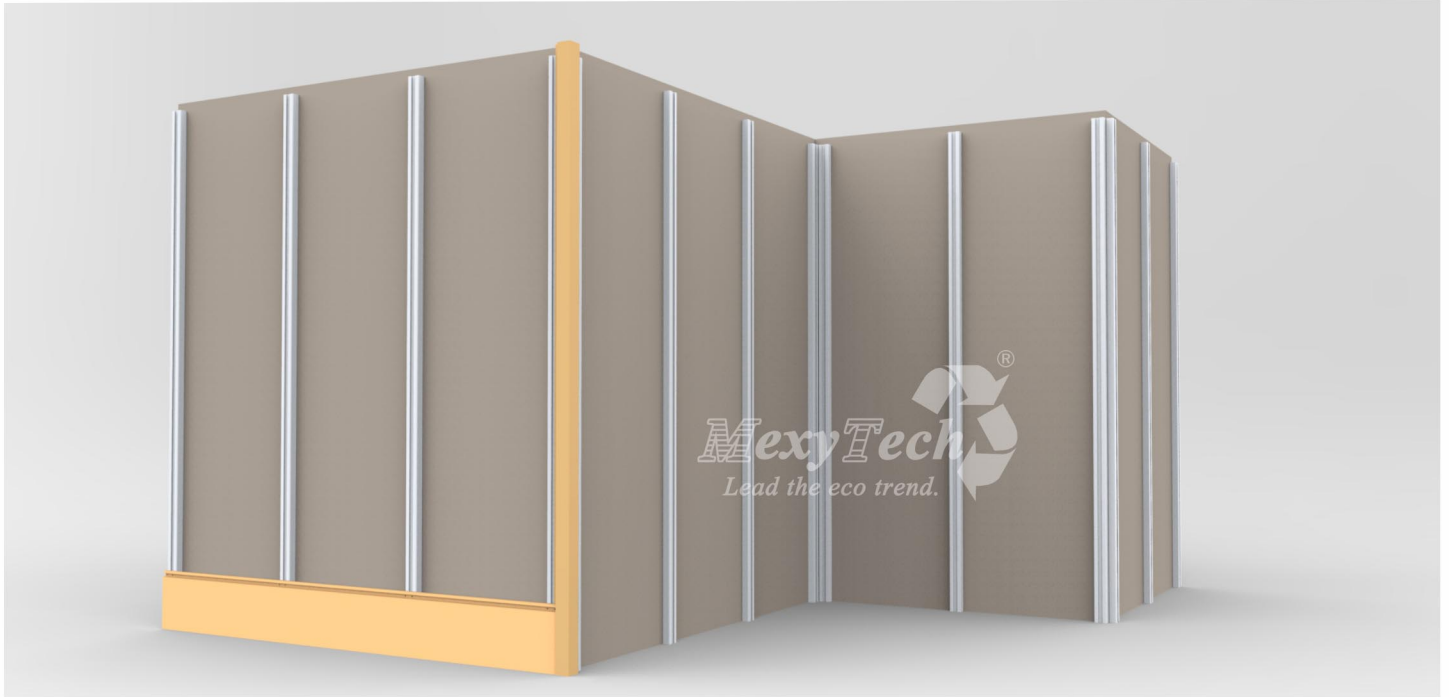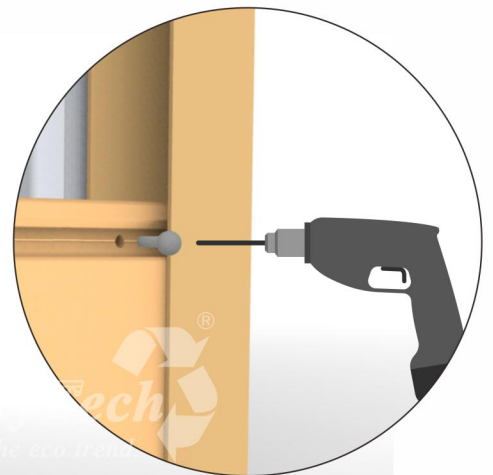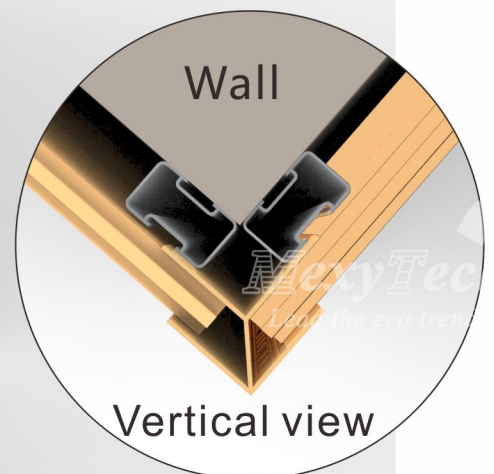

★ Internal corner (as the photo)

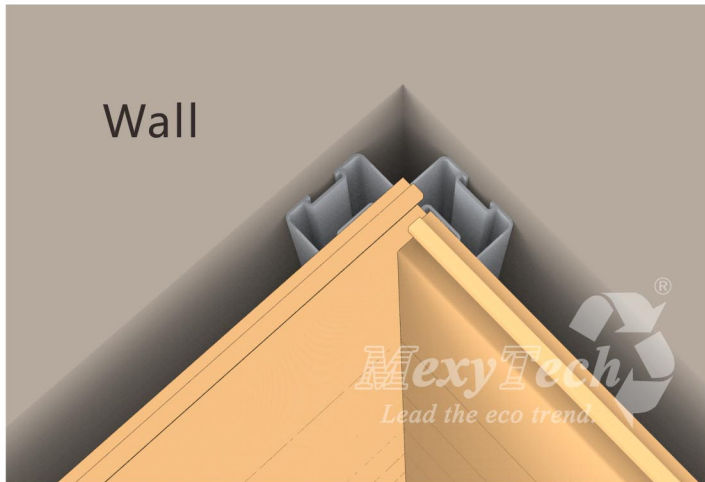

Step 3: Installation completed

